

# Error Messages and Codes

## Section Contents

<b>Introduction</b> .....	<b>2-1</b>
Service Flowchart .....	2-2
Service Technician Cautionary Statements .....	2-3
Procedures .....	2-3
Voltage Measurements .....	2-4
Using Fault History .....	2-5
<b>Service Diagnostics</b> .....	<b>2-7</b>
Entering Service Diagnostics .....	2-7
Service Diagnostics Menu Map .....	2-8
Using the Front Panel with Service Diagnostics .....	2-9
Engine Test Print .....	2-10
Engine NVRAM Default Settings .....	2-10
<b>Printer Error Messages</b> .....	<b>2-11</b>
Index of Errors .....	2-11
Error Message Summaries .....	2-12
<b>Image Processor POST Error Codes</b> .....	<b>2-58</b>
Fault Reporting Devices .....	2-58

## Introduction

This section covers troubleshooting procedures for the Phaser 4400 Laser Printer's front panel error messages. Only jams and fatal errors will produce an associated numeric code. Error messages and codes are usually specific, making it important that service personnel and users record errors exactly when reporting problems with the printer.

Any error code associated with an error message or jam can be viewed by pressing the **INFO** key. Jam error are displayed at the beginning of the info menu, while engine errors are display at the end.

Some procedures require running Service Diagnostics tests to verify a specific printer assembly is operating correctly. Refer to [Service Diagnostics](#) on page 2-7.

To troubleshoot problems not associated with a front panel error message or code such as ac power, or problems related to print-quality, refer to the section [Troubleshooting](#) on page 3-1.

# Service Flowchart

The Service Flowchart outlines one possible approach to troubleshooting and repair of the printer. The Service Flowchart is an overview of the path a service technician could take, using this technical manual, to service the printer and options.

If you choose not to use the Service Flowchart, it is recommended that you start at the appropriate troubleshooting table and proceed from there.

---

## Step 1: Identify the Problem:

---

1. Verify the reported problem does exist.
2. Check for any error codes and write them down.
3. Print Test Prints.
4. Make note of any print-quality problems in the Test Prints.
5. Make note of any mechanical or electrical abnormalities present.
6. Make note of any unusual noise or smell coming from the printer.
7. Print a Usage Profile Report, if the printer is able to print.
8. View the fault history under the Service Tools Menu
9. Verify the AC input power supply is within proper specifications.

---

## Step 2: Inspect and Clean the Printer:

---

1. Switch OFF printer power.
2. Disconnect the AC power cord from the wall outlet.
3. Verify the power cord is free from damage or short circuit and is connected properly.
4. Remove the Print Cartridge and protect it from light.
5. Inspect the printer interior and remove any foreign matter such as paper clips, staples, pieces of paper, dust or toner.
6. Clean the printer interior with a lint-free cloth, dampened slightly with cold water and mild detergent.
  - Do not use solvents or chemical cleaners to clean the printer interior.
  - Do not use any type of oil or lubricant on printer parts.
  - Use only an approved toner vacuum.
7. Clean all rubber rollers with a lint-free cloth, dampened slightly with cold water and mild detergent.
8. Inspect the interior of the printer for damaged wires, loose connections, toner leakage, and damaged or obviously worn parts.
9. If a Print Cartridge appears obviously damaged, replace with a new one.

---

## Step 3: Find the Cause of the Problem:

---

1. Use the Print Engine Error Messages table (page 2-11) or POST Error Code table (page 2-58) to find the cause of the problem.
2. Use Diagnostics to check printer and optional components.
3. Use the Wiring Diagrams and Plug/Jack Locator to locate test points.
4. Take voltage readings at various test points as instructed in the appropriate troubleshooting procedure.
5. Use the **Engine Logic Board Test Print** on page 3-49, to isolate print capability problems between the print engine the Image Processor Board.

---

## Step 4: Correct the Problem:

---

1. Use the Parts List to locate a part number
2. Use the Removal and Replacement Procedures to replace the part.

---

## Step 5: Final Checkout:

---

1. Test the printer to be sure you have corrected the initial problem and there are no additional problems present.
-

# Service Technician Cautionary Statements

- Always turn off the printer and remove the AC power cord, unless instructed to do otherwise in a procedure. This is particularly important when checking continuity between wiring.
- If the printer is kept ON, never touch the conductive parts.
- Wear an electrostatic discharge wrist strap to help prevent damage to the sensitive electronics on the printer circuit boards.
- Wait at least 5 minutes after you have switched OFF the printer power for the Fuser to cool before you work on or around the Fuser.
- If checking a specific part with the covers removed and the interlocks, safety and power switches ON, laser beams may be irradiated from the Laser Unit causing a health hazard. Observe proper precautions at all times.
- When using service diagnostics to turn motors, drives and/or gears, never touch or interrupt the moving parts as damage to the printer will result.

## Procedures

### Using the Troubleshooting Procedures

1. Each **Step** in a Troubleshooting Procedure instructs you to perform a certain action or procedure. The steps are to be followed sequentially in the order given until the problem is fixed or resolved.
2. The **Actions and Questions** box contains additional information and/or additional procedures you must follow to isolate the problem.
3. When a procedure instructs you test a component using service diagnostics, see [Service Diagnostics](#) on page 2-7 for the detailed steps and functions for testing parts of the printer.
4. The action is followed by a question. If your response to the question is “**Yes**”, then follow the instructions for a “**Yes**” reply. If your response to the question is “**No**”, then follow the instructions for a “**No**” reply.
5. Troubleshooting Procedures may ask you to take voltage readings or test for continuity at certain test points within the printer. For detailed diagrams, refer to the section [Wiring Data](#) on page 9-1 for complete information on test point locations and signal names.
6. Troubleshooting Procedures often ask you to replace a printer component. The section [FRU Disassembly](#) on page 6-1 provides detailed steps for removing and replacing all major parts of the printer. The section [Parts Lists](#) on page 7-1 details the location, quantity and part number for all spared parts of the printer.

## General Notes on Troubleshooting

1. Unless indicated otherwise, the instruction “switch ON printer main power” means for you to switch ON printer power and let the printer proceed through POST.
2. When instructed to take voltage, continuity or resistance readings on wiring harness, proceed as follows: check P/J 232–1 to P/J 210–5 by placing the red probe (+) of your meter on pin 1 of P/J 232, and place the black probe (–) of your meter on pin 5 of P/J 210.
3. When you are instructed to take voltage readings between “P/J 232 ⇔ P/J 210” (without specified pin numbers), check all pins. Refer to the section [Wiring Data](#) on page 9-1 for the location of all wiring harnesses and pins.
4. When you are instructed to take a voltage reading, the black probe (–) is generally connected to a pin that is either RTN (Return) or SG (Signal Ground). You can substitute any RTN pin or test point in the printer, and you can use FG (frame ground) in place of any SG pin or test point.
5. Unless a troubleshooting procedure instructs otherwise; before measuring voltages make sure the printer is switched ON, the Imaging Unit and the paper trays are in place, and the interlock switches are actuated.
6. All voltage values given in the troubleshooting procedures are approximate values. The main purpose of voltage readings is to determine whether or not a component is receiving the correct voltage value from the power supply and if gating (a voltage drop) occurs during component actuation. Gating signals may be nothing more than a pulse, resulting in a momentary drop in voltage that may be difficult or impossible to read on the average multi-meter.
7. When a Troubleshooting Procedure instructs you to replace a non-spared component and that component is part of a parent assembly, you should replace the entire parent assembly.

## Voltage Measurements

Power and signal grounds are connected to frame ground. You can perform all circuit troubleshooting using the metal frame (chassis) as the grounding point. If you need more information to locate connectors or test points, refer to [Wiring Data](#) on page 9-1.

Unless otherwise specified, the following voltage tolerances are used within this section.

### Voltage Measurements

Stated	Measured
+3.3 VDC	+3.0 to 3.6 VDC
+5.0 VDC	+4.8 to +5.2 VDC

Stated	Measured
+24.0 VDC	+21.6 to +26.4 VDC
0.0 VDC	Less than +0.5 VDC

## Using Fault History

The printer keeps a record of engine errors and jams. You can access Fault History for either engine errors or jams in one of three ways:

- View the Fault History at the Front Panel.
- Print the printer's Usage Profile.
- View or print the Usage Profile from the printer's web page, if the printer is connected to a network.

The errors are presented as a series of one- or two-digit numeric codes. Use the tables in "Interpreting Fault History" to decipher the codes.

When an error first occurs, record the error message and code, then cycle power to the printer to see if the error recurs.

## Accessing Fault History

1. View the printer's fault history on the front panel.
  - a. Enter **Menus**, then select **Support Menu | Service Tools Menu | Fault History**.
  - b. Select **Engine Errors** or **Jam Errors** to display the errors.
2. Print (if possible) the **Usage Profile** from the printer's front panel **Support Menu**. Fault history information for Engine Errors and Jams is detailed in this report log.
3. If the printer is connected to a network and has a TCP/IP address, view the printer's web page using a web browser.
  - a. Open a web browser.
  - b. Enter the printer's IP address as the URL.
  - c. Select the "Jobs" tab and click the Usage Profile link. You can then click a link to view or to print the Usage Profile.

## Interpreting Fault History Error Codes

The following tables provide a cross-reference of the numeric fault history codes to the Diagnostic Message and code found in [Printer Error Messages](#) on page 2-11. These numeric codes are displayed on the Front Panel for both Engine Errors and Jams; in the Usage Profile, the numeric codes are used only in the Engine Error Log (Item 262).

### Fault History Codes for Engine Errors

Fault History Code	Error	Fault History Code	Error
0	Fan Failure (U5)	6	Tray 2/3 Failure (E11)
1	Fuser Failure (U4)	7	Tray 1 Failure (C3)
2	Motor Failure (U1)	8	Tray 2 Failure (C3)
3	IOT NVM Failure (U6)	9	Tray 3 Failure (C3)
4	Stacker Failure (E9)	10	Tray 2 Failure (E11)
5	Laser failure (U2)	—	—

### Fault History Codes for Jams

Fault History Code	Jam Code	Fault History Code	Jam Code
1	E7-1	12	E2-12
2	E7-2	13	E2-03
3	E7-3	14	E2-13
4	E4-0	15	E2-0E
5	E4-2	16	E2-1E
6	E4-3	17	E6-1
7	E2-0M	18	E6-2
8	E2-1M	19	PSE-1
9	E2-01	20	E3-1
10	E2-11	21	E3-2
11	E2-02	22	E7-0

# Service Diagnostics

The printer's Service Diagnostics provide the ability to:

- Print the Service Diagnostics Menu Map.
- Check the current print engine status.
- Start the Engine Test Print after selecting the print quantity, the source tray, output tray, and simplex or duplex printing.
- Test the functionality of printer motors and fans, solenoids, and clutches.
- Test some portions of drive trains by engaging combinations of motors and clutches or solenoids.
- Test the functionality of sensors, switches, and options by manually toggling each sensor or installing an option.
- Perform NVRAM adjustments essential to the performance of the printer.
- Check eight different print engine components.
- Reset the PS NVRAM locations to factory defaults (see [Resetting NVRAM](#) on page 4-7).

## Entering Service Diagnostics

To enter Service Diagnostics:

While turning on power, press and hold **Back + Info** until the message “Entering Service Diagnostics” appears on the display, then release the keys. The Service Diagnostics Menu appears.

The Service Diagnostic menu has the following selections:

**General Status** — Provides current print engine status.

**Engine Test Print** — Starts the test print.

**Motors/Fans Tests** — Tests the functionality of the printer Motors/Fan.

**Main Motor + Clutches/Sol Tests** — Tests the functionality of the main motor plus clutches or Solenoid at the same time.

**Sensor Tests** — Tests the functionality of sensors, switches, or the presence of options by manually toggling each sensor or installing an option. Some of the sensor tests require cheating the front and/or rear door interlocks.

*Note: The Service Diagnostics Sensor Tests do not include a check of the Tray Stack Height Sensor. Refer to the [Stack Height Sensor Checkout](#) on page 3-23.*

**Solenoid Tests** — Tests the functionality of printer solenoids.

**Clutch Tests** — Tests the functionality of printer clutches.

**Engine NVRAM Adjustments** — Perform NVRAM adjustments essential to the performance of the printer.

**Component Checks** — Tests print engine component functions.

**NVRAM Access** — Lets you reset the PS NVRAM locations to factory defaults.

**Exit** — Reboots the Printer out of Diagnostics.

## Service Diagnostics Menu Map

The Service Diagnostics Menu Map lists the tests available for testing print engine parts and functions while diagnosing printer problems. When you enter Service Diagnostics, the menu items shown in bold type appear on the front panel. When you select one of these items, the list of individual tests appear.

### PHASER™ 4400N PRINTER Service Diagnostics Menu Map

**Print Service Menu Map:** Prints this page

**General Status:** Provides current print engine status.

- Engine ROM Version
- Engine Print Counter
- Engine Configuration
- Print Resolution
- Read Fuser Temperature
- Read Fuser Set Temperature

**Engine Test Print:** Starts the test print.

- Print Test pattern
- Input tray
- Output tray
- Duplex
- Print Quantity

**Motors/Fan Test:** Test the functionality for motors/fan.

- Duplex Motor High
- Duplex Motor Low
- Exit Motor Forward
- Exit Motor Reverse High
- Exit Motor Reverse Low
- Main Motor
- Fan Motor High Speed
- Laser Scan Motor
- Stacker Motor
- Stacker Offset Motor

**Main Motor + Clutch/Sol Tests:** \* Runs main drive motor with each individual clutch and MPT solenoid.

**Sensor Tests:** Tests the functionality of sensors/switches/options by manually toggling each sensor or installing an option.

- Front Cover Switch
- Rear Cover Switch
- Paper Tray Size Read (display paper size, for trays)
- Print Cartridge Switch
- Toner Sensor
- Registration Sensor
- Exit Sensor (Fuser)
- Duplex Sensor
- Stacker Sensor
- Stacker Full Sensor
- Output Tray Full Sensor (Printer)
- Tray 1 Low Paper Sensor
- Tray 2 Low Paper Sensor
- Tray 3 Low Paper Sensor
- Tray 1 No Paper Sensor
- Tray 2 No Paper Sensor
- Tray 3 No Paper Sensor
- MPT No Paper Sensor
- Envelope Feeder No Paper Sensor
- Envelope Feeder Presence
- Duplex Unit Presence
- Stacker Unit Presence

**Solenoid Tests:** Test the functionality of printer solenoids

- \*MPT Solenoid
- Stacker Direction Solenoid

**Clutch tests:** Test the functionality of printer clutches.

- \*Registration Clutch
- \*Tray 1 Feed Clutch
- \*Tray 2 Feed Clutch
- \*Tray 3 Feed Clutch
- \*Tray 1 Turn Roll Clutch
- \*Tray 2 Turn Roll Clutch
- \*Tray 3 Turn Roll Clutch
- \*Envelope Feeder Clutch

**Engine NVRAM Adjustments:** Perform NVRAM adjustments essential to the performance of the printer.

- Laser Power Setting
- MPT Paper Size Adjustment
- Envelope Paper Size Adjustment
- Tray 1 Process Direction
- Tray 2 Process Direction
- Tray 3 Process Direction
- Envelope Feeder Process Direction
- MPT Process Direction
- Tray 1 Scan Direction
- Tray 2 Scan Direction
- Tray 3 Scan Direction
- Envelope Feeder Scan Direction
- MPT Scan Direction
- Duplex Process Direction
- Duplex Scan Direction

**Component Checks:**

- Laser Diode
- Detack Saw Output
- Transfer Roll +
- Transfer Roll -
- Developer Bias AC
- Developer Bias DC
- Charge Roll AC
- Charge Roll DC

**NVRAM Access:** This menu lets you reset the PS NVRAM locations to factory defaults.

PostScript NVRAM Reset

**Exit:** Reboots Printer out of Diagnostics.

**For Service Use Only:**

The Service menu functions are to be used by Xerox service personnel and authorized service providers. The printer can be damaged by improper use of the built-in service tests.

s4400\_328

# Using the Front Panel with Service Diagnostics

The keys on the Front Panel provide the user interface for Service Diagnostics. The keys and their functions are shown in [Front Panel Configuration](#) on page 1-8. After you enter Service Diagnostics, the **Up** and **Down** keys allow you to move or scroll the highlight up and down through a menu. When you have highlighted the item you want to select, press **OK** to enter the selection.

When you are selecting a page quantity in the [Engine Test Print](#) menu use the **OK** key to move the highlight to the right. then use the Up or Down key to change the value of the selected digit. when you have entered the desired quantity, use the **Back** key to enter the selection.

**Note:** *If you moved past the digit you want to change, keep pressing the OK key until the highlight wraps to the desired digit.*

In most of the Service Diagnostics menus, use the **Back** key to exit a menu to the level just above. In most cases, scrolling to the end of a menu and selecting Exit takes you back to the Service Diagnostics Main Menu.

When you select [Read Fuser Temperature](#) from the [General Status](#) menu, the temperature is presented in hex values. The following table lists the temperatures that correspond to the hex values displayed.

**Fuser Temperature Cross Reference Table**

Hex value	Temperature (°C / °F)
EE	0°C / 32°F
FE	10°C / 50°F
FD	20°C / 68°F
FC	30°C / 86°F
FB	40°C / 104°F
F9	50°C / 122°F
F7	60°C / 140°F
F4	70°C / 158°F
F0	80°C / 176°F
EC	90°C / 194°F
E7	100°C / 212°F
E1	110°C / 230°F
DA	120°C / 248°F
D3	130°C / 266°F

Hex value	Temperature (°C / °F)
CA	140°C / 284°F
C6	145°C / 293°F
C1	150°C / 302°F
BD	155°C / 311°F
B8	160°C / 320°F
B3	165°C / 329°F
AE	170°C / 338°F
A9	175°C / 347°F
A4	180°C / 356°F
99	190°C / 374°F
8F	200°C / 392°F
85	210°C / 410°F
7C	220°C / 428°F
72	230°C / 446°F

## Engine Test Print

The Engine Test Print test pattern (shown on [page 4-4](#)) is stored in the Engine Logic Board and is accessible through Service Diagnostics. You can use the Engine Test Print to identify, repair, and validate the operability of printer xerographics and paper handling from all paper sources, options, and output destinations. When you select Engine Test Print from the main Service Diagnostics menu, the following selections are available:

**Print Test Pattern** — Starts the print

**Input Tray** — Allows you to select the paper source

**Output Tray** — Allows you to select the test print destination

**Duplex** — Turns duplexing on or off if the Duplex Unit is installed

**Print Quantity** — Allows you to select the number of test prints to run

### Error and Jam Recovery

If the printer encounters a problem while printing the Engine Test Print, it halts printing and displays an error message on the Front Panel. Refer to the Diagnostic Messages in the Print Engine Error Messages table that follows. (The Diagnostic Messages also appear as secondary headings in the Troubleshooting Procedures.)

Printing resumes after the problem has been fixed.

## Engine NVRAM Default Settings

The following table lists the defaults for each of the Engine NVRAM Adjustments except the paper size adjustments, which have no default settings.

**NVRAM Default Table**

Engine NVRAM Adjustment	Default Value	Range
Laser Power	10	0 - 15
Tray 1 Process Direction	8	0 - 15
Tray 2 Process Direction	8	0 - 15
Tray 3 Process Direction	8	0 - 15
Envelope Process Direction	8	0 - 15
MPT Process Direction	8	0 - 15
Tray 1 Scan Direction	4	0 - 8

Engine NVRAM Adjustments	Default Value	Range
Tray 2 Scan Direction	3	0 - 8
Tray 3 Scan Direction	2	0 - 8
Envelope Scan Direction	4	0 - 8
MPT Scan Direction	6	0 - 8
Duplex Process Direction	8	0 - 15
Duplex Scan Direction	4	0 - 8

# Printer Error Messages

## Index of Errors

<b>Front Panel Message</b>	<b>Page</b>
<b>Jam Errors</b>	
Jam at Tray [#]. Open Tray [#] and Front Cover. Code: Jam E2-##	2-18
Jam at Envelope Feeder; Remove Feeder and Open Front Cover. Code: Jam E2-#E	2-21
Jam at MPT; Open Front Cover to Clear. Code: Jam E2-0M Code: Jam E2-1M	2-22
Jam at Front; Open Front Cover to Clear. Code: Jam E3-#	2-23
Jam At Exit; Open Rear Cover To Clear. Code: Jam E4-0 Code: Jam E4-2 Code: Jam E4-3	2-25
Jam at Stacker; Open Both Rear Covers to Clear. Code: Jam E6-#	2-27
Jam at Front/Rear; Open Front/Rear Cover to Clear. Code: Jam E7-1 Code: Jam E7-2 Code: Jam E7-3	2-29
Paper Size Jam; Check Size and Open Rear Cover to Clear. (PSE-1) Code: Jam PSE-1	2-30
<b>Door and Cover Errors</b>	
Close Front Cover/Close Rear Cover.	2-31
<b>Consumable Errors</b>	
Install or Reseat Print Cartridge.	2-33
Replace Print Cartridge.	2-34
Toner is Low.	2-35
Maintenance Kit is Near End of Life.	2-36
<b>Printer Option Errors</b>	
Install or Reseat the Duplex Unit. Code: E9-1	2-36
Stacker Failure. Code: E9-2	2-37
Install or Reseat the Envelope Feeder. Code: E9-E	2-37
<b>Tray and Media Errors</b>	
Standard Output Tray is Full. Unload Paper.	2-38
Tray [#] Failure. Open and Close Tray [#]. C3-[#]E	2-43
Tray [#] Paper is Low.	2-39
Tray 2 (or Tray 3) Paper is Low.	2-40
Load MPT with [paper size] [paper type].	2-51
No Paper in Tray [#].	2-41
<b>Media Mismatch Errors</b>	
Load Tray [#] with [paper size] [paper type].	2-42
<b>Front Panel Fatal Error Messages and Codes</b>	
Tray 2 or 3 Failure. Code: E11	2-52
Main Motor Failure. Code: U1	2-45
Laser Unit Failure. Code: U2	2-48
Fuser Failure. Code: U4	2-49

# Index of Errors (cont'd.)

## Front Panel Message

Fan Failure; Power Off Now.

Code: U5

Page

2-49

Engine Logic Board NVRAM Failure.

Code: U6

2-50

## Image Processor POST Error Codes

2-58

## Error Message Summaries

*Note: The messages listed in the “Diagnostic Message” column appear only in Service Diagnostics while printing Engine Test Prints. The code numbers in these messages also appear as part of the Help information displayed when you press i.*

Front Panel Message	Diagnostic Message	Error Description	Troubleshooting Procedure
Jam At Tray [#]; Open Tray [#] and Front Cover to Clear.  Press i.	E2-01: Feed Jam E2-02 E2-03	Paper arrives at Registration Sensor too early.	Open Tray [#]. Open Front Cover. Clear Paper Path.
	E2-11: Feed Jam E2-12 E2-13	Paper does not arrive at Registration Sensor position within the specified time.	Go to <b>Jam at Tray [#]. Open Tray [#] and Front Cover.</b> on page 2-18.
Jam At Envelope Feeder; Remove Feeder and Open Front Cover to Clear.  Press i.	E2-0E: Feed Jam	Paper arrives at Registration Sensor too early.	Remove Envelope Feeder. Open Front Cover. Clear Paper Path.
	E2-1E: Feed Jam	Paper does not arrive at Registration Sensor position within the specified time.	Go to <b>Jam at Envelope Feeder; Remove Feeder and Open Front Cover.</b> on page 2-21.
Jam At MPT; Open Front Cover To Clear.  Press i.	E2-0M: Feed Jam	Paper arrives at Registration Sensor too early.	Open Front Cover and remove paper.  Go to <b>Jam at MPT; Open Front Cover to Clear.</b> on page 2-22.
	E2-1M: Feed Jam	Paper does not arrive at REG Sensor position within the specified time.	

## Error Message Summaries (cont'd.)

**Note:** *The messages listed in the “Diagnostic Message” column appear only in Service Diagnostics while printing Engine Test Prints. The code numbers in these messages also appear as part of the Help information displayed when you press i.*

Front Panel Message	Diagnostic Message	Error Description	Troubleshooting Procedure
Jam at Front; Open Front Cover to Clear.  Press i.	E3-1: Registration Jam	Paper Late to Fuser sensor after arrival at Registration Sensor.  Exit Sensor did not actuate within time after the Registration clutch is actuated.	Open Front Cover.  Remove Print Cartridge.  Clear Paper Path.  Go to <b>Jam at Front; Open Front Cover to Clear.</b> on page 2-23.
	E3-2: Registration Jam	1. Registration Sensor did not deactuate within time after actuation of Registration sensor.  2. Registration Sensor is actuated at power-on.	
Jam At Exit; Open Rear Cover To Clear.  Press i.	E4-0: Exit Jam	Paper leaves Exit Sensor early.	Open Rear Cover.  Clear Paper Path.  Go to <b>Jam At Exit; Open Rear Cover To Clear.</b> on page 2-25.
	E4-2: Exit Jam	1. Paper late off Exit Sensor.  2. Exit Sensor on at power-on.	
	E4-3: Exit Jam	Custom Paper late off Exit Sensor, exceeding the specified time from Registration Sensor.	Open Rear Cover.  Clear Paper Path.  Change Paper Setting in Custom Mode to correct size.  Go to <b>Jam At Exit; Open Rear Cover To Clear.</b> on page 2-25.
Jam At Stacker; Open Both Rear Covers to Clear.  Press i.	E6-1: Stacker Jam	1. Paper late to Stacker Sensor.	Open Stacker Rear Door.  Clear Paper Path.  Open Printer Rear Cover. Clear Paper Path.  Go to <b>Jam at Stacker; Open Both Rear Covers to Clear.</b> on page 2-27.
	E6-2: Stacker Jam	1. Paper late off Stacker Sensor. 2. Stacker Sensor on at power-on.	

## Error Message Summaries (cont'd.)

**Note:** *The messages listed in the “Diagnostic Message” column appear only in Service Diagnostics while printing Engine Test Prints. The code numbers in these messages also appear as part of the Help information displayed when you press i.*

Front Panel Message	Diagnostic Message	Error Description	Troubleshooting Procedure
Jam At Front; Open Front Cover To Clear Press i.	E7-0: Duplex Jam	Paper arrives at Registration Sensor early from Duplex Sensor.	Open front cover. Remove print cartridge. Clear paper path. Go to <b>Jam at Front/Rear; Open Front/Rear Cover to Clear.</b> on page 2-29.
Jam At Rear; Open Rear Cover To Clear. Press i.	E7-1: Duplex Jam	Paper late to Duplex Sensor.	Open Rear Cover. Remove Duplex Unit. Clear paper path. Go to <b>Jam at Front/Rear; Open Front/Rear Cover to Clear.</b> on page 2-29.
	E7-2: Duplex Jam	1. Paper late off Duplex Sensor. 2. Duplex Sensor on at power-up.	
	E7-3: Duplex Jam	Paper late to Registration Sensor from Duplex Sensor.	
Tray [#] Failure. Open and Close Tray [#]. Press i.	C3-#E Tray [#] Not In	<ul style="list-style-type: none"> <li>■ Tray [#] is not detected</li> <li>■ Tray motor failure</li> <li>■ Harness problem</li> <li>■ Stack height sensor failure</li> </ul>	Inspect and repair Tray [#]. <b>Tray [#] Failure. Open and Close Tray [#].</b> on page 2-43.
No (Load) Paper In Envelope Feeder Press i.	Envelope Feeder Empty	Envelope Feeder is out of paper.	Load Paper into Envelope Feeder. Go to <b>Load Envelope Feeder with [paper size] [paper type].</b> on page 2-55.
Load MPT	MPT Paper Empty	MPT is out of paper.	Load paper into MPT. Go to <b>Load MPT with [paper size] [paper type].</b> on page 2-51.
Stacker Is Full, Unload Paper. Press i.	Stacker Output Tray Full	Several prints are delivered to the top tray after the Stacker Full Stack Sensor is actuated.	Empty Stacker Tray. Go to <b>Stacker is Full, Unload Paper.</b> on page 2-54.
Standard Output Tray is Full, Unload Paper. Press i.	Output Tray Full	Top Tray is declared full when several prints are delivered to the top tray after the Full Stack Sensor is actuated.	Empty Top Tray. Go to <b>Standard Output Tray is Full. Unload Paper.</b> on page 2-38.

## Error Message Summaries (cont'd.)

**Note:** *The messages listed in the “Diagnostic Message” column appear only in Service Diagnostics while printing Engine Test Prints. The code numbers in these messages also appear as part of the Help information displayed when you press i.*

Front Panel Message	Diagnostic Message	Error Description	Troubleshooting Procedure
No Paper In Tray [#] Press i.	Tray [#] Empty	Tray [#] is out of paper.	Load paper into Tray [#]. Go to <a href="#">No Paper in Tray [#]</a> . on page 2-41.
Load Tray [#] with [paper size] [paper type].	PSE-1: Paper Size Error	Paper Size Error.	Load correct size paper in tray. Go to <a href="#">Load Tray [#] with [paper size] [paper type]</a> . on page 2-42
Close Front Cover Close Rear Cover. Press i.	Close Front Cover/Close Rear Cover	1. Front cover interlock is open. 2. Rear cover interlock is open.	Close Front Cover. Close Rear Cover. Go to <a href="#">Close Front Cover/Close Rear Cover</a> . on page 2-31.
Install or Reseat The Duplex Unit. Press i.	E9-1: Duplex Unit Fail.	Duplex module removed while power is on.	Reinstall Duplex Module. Go to <a href="#">Install or Reseat the Duplex Unit</a> . on page 2-36.
Stacker Failure. Press i.	E9-2: Stacker Unit Fail	Stacker removed while power is on.	Reinstall Stacker. Go to <a href="#">Stacker Failure</a> . on page 2-37.
Install or Reseat the Envelope Feeder Press i.	E9-E: Envelope Feeder Fail/Reinstall	Envelope feeder module removed while power-on.	Reinstall Envelope Feeder. Go to <a href="#">Install or Reseat the Envelope Feeder</a> . on page 2-37.
Tray 2 or 3 Failure Press i. or Tray 2 Failure Press i.	E11: Tray 2/3 Fail	Either Tray 2 or Tray 3 was disconnected after power-on.	Reinstall Feeder 2/3. Go to <a href="#">Tray 2 or 3 Failure</a> . on page 2-52.

## Error Message Summaries (cont'd.)

**Note:** *The messages listed in the “Diagnostic Message” column appear only in Service Diagnostics while printing Engine Test Prints. The code numbers in these messages also appear as part of the Help information displayed when you press i.*

Front Panel Message	Diagnostic Message	Error Description	Troubleshooting Procedure
Paper Size Jam; Check Size and Open Rear Cover To Clear. Press i.	PSE-1: Paper Size Error	There is a conflict between the size of the paper, which is detected by the Size Switches, and the length of paper the printer detects by the length of time the Registration Sensor is actuated.	Correct the mismatch. Open Rear Cover.  Go to <b>Paper Size Jam; Check Size and Open Rear Cover to Clear. (PSE-1)</b> on page 2-30.
Install Or Reseat Print Cartridge Press i.	J3 Missing Print Cartridge.	1. Print Cartridge is not installed. 2. The installed Print Cartridge is not the correct one.	Install the Print Cartridge, or replace with the correct Print Cartridge.  Go to <b>Install or Reseat Print Cartridge.</b> on page 2-33.
Toner Is Low. Press i.	J5 Toner Low.	Toner Low is detected after 10 prints while Toner Sensor is on.	Go to <b>Toner is Low.</b> on page 2-35.
Main Motor Failure Press i.	U1 Motor Fail/Power Off	Main Motor speed is less than specified RPM after 1.3 seconds.	Power Off and On.  Go to <b>Main Motor Failure.</b> on page 2-45.
Laser Unit Failure Press i.	U2 Laser Fail/Power Off	1. Transmitting /BD signal is longer than specified value for 10 sec. + t1. 2. The laser power does not reach the specified value. 3. Laser signal intervals become longer than the Fail time interval after Laser warm-up is completed.	Power Off and On.  Go to <b>Laser Unit Failure.</b> on page 2-48.

## Error Message Summaries (cont'd.)

**Note:** *The messages listed in the “Diagnostic Message” column appear only in Service Diagnostics while printing Engine Test Prints. The code numbers in these messages also appear as part of the Help information displayed when you press i.*

Front Panel Message	Diagnostic Message	Error Description	Troubleshooting Procedure
Fuser Failure Press i.	U4 Fuser Fail/Power Off	<ul style="list-style-type: none"> <li>■ Low temperature trouble/Power off (Fuser temperature drops below the set temperature after the Fuser warm-up is complete).</li> <li>■ Warm-up fail/Power off (Fuser warm-up does not complete within 110 seconds).</li> <li>■ STS Disconnection fail/Power off (Thermistor circuit is detected to be open).</li> <li>■ High Temperature trouble/Power off (Fuser temperature rises above the set temperature).</li> <li>■ Continuous heat on/Power off (Heat rod is on for 10 seconds when the Main Drive Motor is stopped, after the Fuser warm-up is completed).</li> </ul>	Go to <a href="#">Fuser Failure</a> . on page 2-49.
Fan Failure Power Off Now Press i.	U5 Fan Fail/Power Off	Main Fan has failed.	Check the Main Fan. Power Off and On. Go to <a href="#">Fan Failure; Power Off Now</a> . on page 2-49.
Engine Logic Board NVRAM Failure. Press i.	U6 NVM Fail/Power Off	<ol style="list-style-type: none"> <li>1. Read error detected during power-on.</li> <li>2. Write Error detected.</li> </ol>	Power Off and On. Go to <a href="#">Engine Logic Board NVRAM Failure</a> . on page 2-50).

# Jam at Tray [#]. Open Tray [#] and Front Cover.

## (E2-##: Feed Jam)

**E2-0#:** Paper arrives early to the Registration Sensor or is on the sensor at power-on.

**E2-1#:** Paper arrives late to the Registration Sensor.

### Paper Jam/Misfeed Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	Check the paper in all trays. Check for curled, damaged, or damp paper and for paper that is out of specification. <b>Is the paper in good condition and does it meet specification?</b>	Go to step 2.	Replace with fresh dry paper that is within specifications.
2	Check all paper paths for contamination, paper, or other obstructions. <b>Are all paper paths clean and free of obstructions?</b>	Go to step 3.	Remove contamination or obstructions.
3	1. Enter Service Diagnostics and select Test Print. 2. Run five prints from every paper tray. <b>Does the problem appear when printing from Tray 2 or 3?</b>	Go to step 9.	Go to step 4.
4	1. Remove Tray 1 from the printer. 2. Check the Nudger Roller, Feed Roller, and Retard Roller for contamination and wear. <b>Are all rolls clean and in good condition?</b>	Go to step 5.	Clean or replace the Nudger, Feed or Retard Roller as necessary (RRP 3.8 on <a href="#">page 6-36</a> / RRP 2.1 on <a href="#">page 6-18</a> ).
5	1. Reinsert Tray 1 into the printer. 2. From the rear of the printer, watch the Tray 1 Bottom Plate. <b>Is the Bottom Plate raised fully and evenly?</b>	Go to step 6.	Go to <a href="#">Tray Motor Assembly Checkout</a> on <a href="#">page 3-26</a> .
6	From the rear of the printer, watch the paper feed as you print a test print from Tray 1. <b>Do the Nudger Roller and Feed Roller rotate?</b>	Go to step 7.	Go to <a href="#">Tray 1 Feed Clutch</a> on <a href="#">page 3-29</a> .
7	<b>Is paper fed from the tray to the Turn Roller Assembly?</b>	Go to step 8.	Replace the Retard, Nudger, and Feed Rollers (RRP 2.1 on <a href="#">page 6-18</a> and RRP 3.8 on <a href="#">page 6-36</a> ).

## Paper Jam/Misfeed Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
8	<b>Does the Turn Roller Assembly move the paper to the Registration Sensor?</b>	Go to <a href="#">Registration Sensor</a> on page 3-20.	Go to <a href="#">Turn Roller Clutch Assembly</a> on page 3-28.
9	<ol style="list-style-type: none"> <li>1. Remove Tray 1.</li> <li>2. Check the paper chute at the front of the tray (the chute guides paper from Tray 2 to the Tray 1 turn rollers). Check for contamination, paper, or other obstructions.</li> </ol> <p><b>Is the chute clean and free of obstructions?</b></p>	Go to step 10.	Remove obstructions and clean chute. Replace paper tray if necessary (PL 2.1 on <a href="#">page 7-6</a> ).
10	<b>Do the jams occur when feeding from Tray 3.</b>	Go to step 14.	Go to step 11.
11	<ol style="list-style-type: none"> <li>1. Remove Tray 2 and place the tray in Feeder 1.</li> <li>2. Place Tray 1 in Feeder 2.</li> <li>3. Enter Service Diagnostics and select Test Print.</li> <li>4. Run 20 to 25 test prints from Tray 2.</li> </ol> <p><b>Did all prints complete successfully?</b></p>	The paper tray currently in Feeder 1 appears to be defective. Go to step 18.	Go to step 12.
12	<ol style="list-style-type: none"> <li>1. Remove the tray currently in Feeder 2.</li> <li>2. Check the Nudger and Feed Rollers in Feeder 2 for contamination and wear.</li> </ol> <p><b>Are the Feed Rollers clean and in good condition?</b></p>	Go to step 13.	Replace the Feed Rollers (RRP 11.11 on <a href="#">page 6-130</a> ).
13	<p>Check the Tray 2 Turn Roller Assembly for obstructions, contamination, or wear.</p> <p><b>Are the Turn Rolls clean and in good condition?</b></p>	Replace the Feeder PWB (RRP 11.9 on <a href="#">page 6-128</a> ). If the problem persists, replace the Size PWB (RRP 11.19 on <a href="#">page 6-139</a> ), then the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Remove the obstruction; clean, or replace the Turn Roller Assembly (RRP 11.8 on <a href="#">page 6-127</a> ).
14	<p>Remove Tray 1 and Tray 2. Check the paper chute at the front of both trays (the chute guides paper from Tray 3 to the Tray 2 turn rolls and from Tray 2 to the Tray 1 turn rollers). Check for contamination, paper, or other obstructions.</p> <p><b>Is the chute clean and free of obstructions?</b></p>	Go to step 15.	Remove obstructions and clean chute. Replace paper tray if necessary (PL 2.1 on <a href="#">page 7-6</a> ).

## Paper Jam/Misfeed Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
15	<ol style="list-style-type: none"> <li>1. Replace Tray 2.</li> <li>2. Remove Tray 3 and place the tray in Feeder 1.</li> <li>3. Place Tray 1 in Feeder 3.</li> <li>4. Enter Service Diagnostics and select Test Print.</li> <li>5. Run 20 to 25 test prints from tray 3.</li> </ol> <p><b>Did all prints complete successfully?</b></p>	The paper tray currently in Feeder 1 appears to be defective. Go to step 19.	Go to step 16.
16	<ol style="list-style-type: none"> <li>1. Remove the tray currently in Feeder 3.</li> <li>2. Check the Nudger and Feed Rolls in Feeder 3 for contamination and wear.</li> </ol> <p><b>Are the Feed Rolls clean and in good condition?</b></p>	Go to step 17.	Replace the Feed Rolls (RRP 11.11 on <a href="#">page 6-130</a> ).
17	<p>Check the Tray 3 Turn Roller Assembly for obstructions, contamination, or wear.</p> <p><b>Are the Turn Rolls clean and in good condition?</b></p>	Go to step 20.	Remove the obstruction, clean, or replace the Turn Roller Assembly (RRP 11.8 on <a href="#">page 6-127</a> ).
18	<p>Perform <a href="#">Tray Motor Assembly Checkout</a> on page 3-26 to check the tray motor.</p> <p><b>Does it operate correctly?</b></p>	<p>Check the paper tray for contamination, obstructions, broken or deformed parts.</p> <p>Replace the paper tray if necessary (PL 2.1 on <a href="#">page 7-6</a>).</p>	Follow the repair advice in the checkout procedure.
19	<p>Perform <a href="#">Tray Motor Assembly Checkout</a> on page 3-26 to check the tray motor.</p> <p><b>Does it operate correctly?</b></p>	<p>Check the paper tray for contamination, obstructions, broken or deformed parts.</p> <p>Replace the paper tray if necessary (PL 2.1 on <a href="#">page 7-6</a>).</p>	Follow the repair advice in the checkout procedure.
20	<p>Replace the Feeder PWB (RRP 11.9 on <a href="#">page 6-128</a>). If the problem persists, replace in this order:</p> <ul style="list-style-type: none"> <li>■ Size PWB (RRP 11.19 on <a href="#">page 6-139</a>)</li> <li>■ Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>)</li> </ul>		

# Jam at Envelope Feeder; Remove Feeder and Open Front Cover.

## (E2-#E: Feed Jam)

**E2-0E:** Paper arrives at Registration Sensor too early.

**E2-1E:** Paper does not arrive at Registration Sensor position within a specified time.

### Envelope Feeder Jam Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	1. Remove all envelopes. 2. Check the Envelope Feeder and Printer for contamination, paper scraps, or other obstructions.  <b>Is the printer and Envelope Feeder clean and free of obstructions?</b>	Go to step 2.	Clean feeder and remove all obstructions.
2	Check the Feed Belts. Check for dirt or contamination on the top side and the under side of the belt.  <b>Are both sides of the belt clean?</b>	Go to step 3.	Replace the Feed Belts (RRP 13.17 on <a href="#">page 6-176</a> ).
3	1. Enter Service Diagnostics and select Clutch Tests. 2. Scroll to Envelope Feeder and press <b>OK</b> .  <b>Can you hear the clutch energize?</b>	Go to step 4.	Go to <a href="#">Envelope Feed Clutch</a> on <a href="#">page 3-38</a> .
4	1. Press <b>Back</b> . 2. Scroll to Main Motor+Clutch/Sol Tests and press <b>OK</b> . 3. Scroll to Motor+Envelope Feeder. 4. Press <b>OK</b> and watch the Feed Belts and Feed Rollers.  <b>Do all the Feed Belts and Feed Rollers rotate?</b>	Go to step 7.	Go to step 5.
5	Ensure the Envelope Feeder is installed properly and is contacting the printer drive gear.  <b>Is the Envelope Feeder installed correctly?</b>	Go to step 6.	Reinstall the Envelope Feeder correctly.
6	Remove the Envelope Feeder and check the feeder drive gears.  <b>Are all gears in good condition and operating properly?</b>	Replace the Envelope Feed Clutch (RRP 13.12 on <a href="#">page 6-168</a> ). If the problem persists, Replace the Envelope Feeder PWB (RRP 13.3 on <a href="#">page 6-159</a> ).	Replace the gears as necessary (PL 12.2 on <a href="#">page 7-32</a> ).

## Envelope Feeder Jam Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
7	<p>Perform <b>Registration Sensor</b> on page 3-20 to check the Registration Sensor.</p> <p><b>Is the Registration Sensor operating correctly?</b></p>	<p>Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>).</p>	<p>Replace the Registration Sensor (RRP 5.4 on <a href="#">page 6-61</a>).</p>

## Jam at MPT; Open Front Cover to Clear.

### (E2-#M: Feed Jam)

**E2-0M:** Paper arrives at REG sensor early.

**E2-1M:** Paper arrives at REG sensor late.

### Feed Jam Procedure

Step	Actions and Questions	Yes	No
1	<p>1. Switch the printer power OFF. 2. Open the Front Cover. 3. Check the MPT Chute for contamination or obstructions.</p> <p><b>Is the MPT free of contamination, paper, or other obstructions?</b></p>	Go to step 2.	Clean the MPT and remove the paper or obstruction.
2	<p>Check the MPT Feed Roller for contamination and wear.</p> <p><b>Is the feed roller clean and in good condition?</b></p>	Go to step 3.	Replace the MPT Feed Roller (RRP 4.3 on <a href="#">page 6-47</a> ).
3	<p>1. Enter Service Diagnostics and select Solenoid Tests. 2. Scroll to MPT and press <b>OK</b>.</p> <p><b>Can you hear the solenoid energize?</b></p>	Go to step 4.	Go to <a href="#">MPT Pick Up Solenoid on page 3-30</a> .
4	<p>1. Open the Front Cover and cheat the Front Cover Interlock. 2. From the Service Diagnostics menu select Motors/Fans Tests and press <b>OK</b>. 3. Scroll to Main Motor and press <b>OK</b>.</p> <p><b>Do the MPT drive gears rotate smoothly?</b></p>	Go to step 5.	Check, repair, or replace the Drive Gear (PL 5.1 on <a href="#">page 7-14</a> ), Main Drive Gear Assembly (RRP 8.2 on <a href="#">page 6-85</a> ), or Main Motor Assembly (RRP 8.1 on <a href="#">page 6-84</a> ) as necessary.

## Feed Jam Procedure (cont'd.)

Step	Actions and Questions	Yes	No
5	<ol style="list-style-type: none"> <li>1. Scroll to Main Motor + Clutch/Sol Tests and press <b>OK</b>.</li> <li>2. Select Main Motor + MPT Sol and press <b>OK</b>.</li> </ol> <p><b>Do all of the following occur?</b></p> <ul style="list-style-type: none"> <li>■ <b>The Feed Roller Shaft rotates?</b></li> <li>■ <b>The Pick-up Cams move and allow the Bottom Plate to contact the Feed Roller?</b></li> <li>■ <b>The Feed Roller Shaft stops after one complete revolution?</b></li> </ul>	Check the Registration Sensor ( <a href="#">Registration Sensor</a> on page 3-20).	Remove the MPT Chute Assembly (RRP 4.1 on <a href="#">page 6-44</a> ) and repair or replace components as necessary.
6	<ol style="list-style-type: none"> <li>1. Check the Registration Sensor (<a href="#">Registration Sensor</a> on page 3-20).</li> </ol> <p><b>Is the Registration Sensor good?</b></p>	If the problem persists, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Follow the repair advice in the Registration Sensor check.

## Jam at Front; Open Front Cover to Clear.

### (E3-#: Registration Jam)

**E3-1:** Paper is late to the Exit Sensor or paper is late off the Registration Sensor.

**E3-2:** Registration Sensor is actuated at power-on.

### Registration Jam Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"> <li>1. Switch the printer power OFF.</li> <li>2. Open the Front Cover and remove the Print Cartridge.</li> <li>3. Check the printer for contamination, paper scraps, or other obstructions.</li> </ol> <p><b>Is the paper path clean and free of obstructions?</b></p>	Go to step 2.	Clean components and remove all obstructions.
2	<ol style="list-style-type: none"> <li>1. Open the Rear Cover.</li> <li>2. Remove the Duplex unit if installed.</li> <li>3. Open the Fuser Access Cover.</li> <li>4. Check for contamination, paper scraps, or other obstructions.</li> </ol> <p><b>Is the paper path clean and free of obstructions?</b></p>	Go to step 3.	Clean components and remove all obstructions.
3	<ol style="list-style-type: none"> <li>1. Remove Fuser.</li> <li>2. Rotate the Fuser Gear.</li> </ol> <p><b>Does the Fuser Idler Gear rotate smoothly?</b></p>	Go to step 4.	Replace the Fuser Assembly (RRP 6.2 on <a href="#">page 6-66</a> ).
4	<p>Check the paper in all trays.</p> <p><b>Is the paper loaded in the paper trays damp, wrinkled, or damaged?</b></p>	Replace with fresh, dry paper.	Go to step 5.

## Registration Jam Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
5	<b>Is the paper size used within specifications?</b>	Go to step 6.	Replace with paper meeting size specifications.
6	<ol style="list-style-type: none"> <li>1. Reinstall the Fuser.</li> <li>2. Close the Rear Cover.</li> <li>3. Cheat the Front Cover Interlock.</li> <li>4. Enter Service Diagnostics, select Clutch Tests, and press <b>OK</b>.</li> <li>5. Select Registration and press <b>OK</b>.</li> </ol> <p><b>Can you hear the Registration Clutch energize?</b></p>	Go to step 7.	Go to <a href="#">Registration Clutch</a> on page 3-27.
7	<ol style="list-style-type: none"> <li>1. Press <b>Back</b> to return to the top Diagnostics menu, then select Main Motor+Clutch/Sol tests and press <b>OK</b>.</li> <li>2. Select Motor+Registration and press <b>OK</b>.</li> </ol> <p><b>Do the Registration Rolls rotate smoothly?</b></p>	Go to step 9.	Go to step 8.
8	Repair or replace as necessary: <ul style="list-style-type: none"> <li>■ Registration Rolls (RRP 5.6 on <a href="#">page 6-62</a>)</li> <li>■ Registration Clutch (RRP 5.5 on <a href="#">page 6-62</a>)</li> <li>■ Main Drive Gear Assembly (RRP 8.2 on <a href="#">page 6-85</a>)</li> <li>■ Main Motor Assembly (RRP 8.1 on <a href="#">page 6-84</a>).</li> </ul>		
9	Perform <a href="#">Registration Sensor</a> on page 3-20 to test the Registration Sensor. <p><b>Is the Registration Sensor working correctly?</b></p>	Go to step 10.	Repair or replace the Registration Sensor as necessary (RRP 5.4 on <a href="#">page 6-61</a> ).
10	Perform <a href="#">Exit Sensor</a> on page 3-34 to test the Exit Sensor. <p><b>Is the Exit Sensor working correctly?</b></p>	Go to step 11.	Replace the Fuser Assembly (RRP 6.2 on <a href="#">page 6-66</a> ).
11	<ol style="list-style-type: none"> <li>1. Enter Service Diagnostics (if necessary).</li> <li>2. Select Engine Test Print and press <b>OK</b>.</li> <li>3. Run test prints.</li> <li>4. When the error code appears, inspect the position of lead edge of the paper.</li> </ol> <p><b>Does the lead edge of the paper pass between the Transfer Roller and the Print Cartridge Drum?</b></p>	Go to step 12.	Clean the Registration Rollers.
12	<b>Is the Detack Saw clean and free of contamination?</b>	Go to step 13.	Clean the Detack Saw or Replace the Transport Chute Assembly (RRP 6.1 on <a href="#">page 6-65</a> ).

## Registration Jam Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
13	Inspect paper path between Transport Chute Assembly and the Fuser Assembly. <b>Does the paper pass through the Fuser Assembly.</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Fuser Assembly (RRP 6.2 on <a href="#">page 6-66</a> ).

## Jam At Exit; Open Rear Cover To Clear.

### (E4-#: Exit Jam)

**E4-0:** Paper leaves the Exit Sensor early.

**E4-2:** Paper leaves the Exit Sensor late.  
The Exit Sensor is on at power-on.

**E4-3:** Custom paper late off the Exit Sensor within a specified time from the Registration Sensor.

### Exit Jam Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	Check the paper in the paper trays. Ensure that: ■ The paper is installed correctly and the end guide touches the rear of the paper stack. ■ The paper is within specification. ■ If Custom Mode is used, the settings are correct. <b>Are all settings correct and is the paper within specification?</b>	Go to step 2.	Install fresh paper that is within specification or correct settings.
2	Check the paper path for contamination, paper, or other obstructions. <b>Is the paper path clean and free of obstructions?</b>	Go to step 3.	Remove obstructions and clean components as necessary.
3	1. Enter Service Diagnostics and select Engine Test Print. 2. Print 25 prints from Tray 1. <b>When the error code is displayed, is there paper on the Exit Sensor?</b>	Go to step 6.	Go to step 4.
4	1. Open the Rear Cover and the Fuser Access Cover. 2. Check the Exit Sensor Actuator. <b>Does the actuator move freely and return to the home position when released?</b>	Go to step 5.	Repair actuator or replace the Fuser Assembly (RRP 6.2 on <a href="#">page 6-66</a> ).

## Exit Jam Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
5	<ol style="list-style-type: none"><li>1. Enter Service Diagnostics and select Sensor Tests.</li><li>2. Scroll to Exit Sensor (Fuser) and press <b>OK</b>.</li><li>3. Open the Fuser Access Cover and use a piece of paper to block and unblock the Exit Sensor.</li></ol> <p><b>Does the message on the display alternate between “With Paper” and “Without Paper” as you block and unblock the sensor?</b></p>	Replace Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to <a href="#">Exit Sensor</a> on <a href="#">page 3-34</a> .
6	<p>Open the Rear Cover and check the Face Up Chute Assembly for contamination or obstructions.</p> <p><b>Is the chute assembly clean and free of obstructions?</b></p>	Go to step 7.	Clean or replace the Face Up Chute Assembly as necessary (PL 1.2 on <a href="#">page 7-4</a> ).
7	<ol style="list-style-type: none"><li>1. Scroll to Motors/Fans Tests and press <b>OK</b>.</li><li>2. Scroll to Exit Motor Forward and press <b>OK</b>.</li></ol> <p><b>Does the Exit Motor rotate?</b></p>	Go to step 8.	Go to <a href="#">Exit Motor</a> on <a href="#">page 3-35</a> .
8	<p><b>Do the Exit Rollers and Pinch Rollers (on the Rear Cover) rotate smoothly?</b></p>	Go to step 9.	Replace the Exit Rollers or Exit Chute Assembly as necessary (PL 7.1 on <a href="#">page 7-18</a> ).
9	<p>Check the Fuser Assembly for obstructions or contamination.</p> <p><b>Is the Fuser clean and free of obstructions?</b></p>	Go to step 10.	Clean or replace the Fuser Assembly (RRP 6.2 on <a href="#">page 6-66</a> ), as necessary.
10	<p>Check the Transport Chute for contamination or obstructions.</p> <p><b>Is the Transport Chute clean and free of obstructions?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Clean or replace the Transport Chute as necessary (RRP 6.1 on <a href="#">page 6-65</a> ).

# Jam at Stacker; Open Both Rear Covers to Clear.

## (E6-#: Stacker Jam)

**E6-1:** Paper late to Stacker Sensor.

**E6-2:** Paper late off Stacker Sensor.

### Stacker Jam Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Open the printer Rear Cover and the Stacker Rear Cover.</li><li>2. Check for paper or other obstructions in the paper path.</li></ol> <p><b>Is the printer free of jammed paper, paper scraps, or other obstructions?</b></p>	Go to step 2.	Clear all jammed paper, paper scraps, and obstructions from the printer and the Stacker.
2	<ol style="list-style-type: none"><li>1. Enter Service Diagnostics.</li><li>2. Select Engine Test Print and press <b>OK</b>.</li><li>3. Scroll to Print Quantity and press <b>OK</b>.</li><li>4. Set the quantity 15 and press <b>Back</b>.</li><li>5. Scroll to Output Tray and press <b>OK</b>.</li><li>6. Press <b>Down</b> to select Stacker and press <b>OK</b>.</li><li>7. Scroll to Print Test Pattern and press <b>OK</b>.</li></ol> <p><b>Does the error code reappear?</b></p>	Go to step 3.	Problem solved.
3	<ol style="list-style-type: none"><li>1. Enter Service Diagnostics and select Sensor Tests.</li><li>2. Scroll to Stacker Sensor test and press <b>OK</b>.</li><li>3. Open the Stacker Rear Cover.</li><li>4. Press and release the Stacker Exit Sensor Actuator.</li></ol> <p><b>Does the message on the display alternate between “With Paper” and “Without Paper” as you press and release the actuator?</b></p>	Go to step 5.	Go to step 4.
4	<ol style="list-style-type: none"><li>1. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li><li>2. On the Engine Logic Board, check the voltage between P/J35 pin 7 and frame ground as you actuate and deactivate the Stacker Exit Sensor Actuator.</li></ol> <p><b>Is the voltage +3.3 VDC when deactivated and 0.0 VDC when actuated?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Stacker Exit Sensor (RRP 10.11 on <a href="#">page 6-111</a> ). If the problem persists, replace the Stacker PWB (RRP 10.7 on <a href="#">page 6-107</a> ).
5	<ol style="list-style-type: none"><li>1. Exit Sensor Tests and scroll to Motors/Fans Tests.</li><li>2. Scroll to Stacker Motor and press <b>OK</b>. The motor should run for about three seconds.</li></ol> <p><b>Does the Stacker Motor run?</b></p>	Go to step 8.	Go to step 6.

## Stacker Jam Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
6	<ol style="list-style-type: none"> <li>1. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li> <li>2. Enter Service Diagnostics and select Motors/Fans Tests.</li> <li>3. Scroll to Stacker Motor.</li> <li>4. On the Engine Logic Board, measure the voltage between P/J35 pin 6 and frame ground as you press <b>OK</b>.</li> </ol> <p><b>Does the voltage drop from +3.3 VDC to +0.5 VDC when OK is pressed?</b></p>	Go to step 7.	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).
7	<ol style="list-style-type: none"> <li>1. Switch the printer power OFF.</li> <li>2. Remove the Stacker from the printer (RRP 10.1 on <a href="#">page 6-101</a>) and turn the Stacker upside down.</li> <li>3. Disconnect P/J210 from the Stacker PWB.</li> <li>4. Check the resistance between pins 1 and 4, pins 1 and 6, pins 2 and 3, and pins 2 and 5 on the disconnected plug.</li> </ol> <p><b>Are all readings 70 ± 10 ohms?</b></p>	Replace the Stacker PWB (RRP 10.7 on <a href="#">page 6-107</a> ).	Replace the Stacker Motor (RRP 10.8 on <a href="#">page 6-108</a> ).
8	<ol style="list-style-type: none"> <li>1. Open the Stacker Rear Cover.</li> <li>2. Press <b>OK</b> to run the Stacker Motor.</li> <li>3. Check the Stacker rollers.</li> </ol> <p><b>Are the Stacker Rollers rotating smoothly?</b></p>	Go to step 9.	Repair or replace the Stacker Rollers as necessary (RRP 10.14 on <a href="#">page 6-114</a> / RRP 10.15 on <a href="#">page 6-115</a> ).
9	<ol style="list-style-type: none"> <li>1. Switch the printer power OFF.</li> <li>2. Remove the Stacker (RRP 10.1 on <a href="#">page 6-101</a>).</li> <li>3. Open the printer rear cover and check the movement of the Exit Gate.</li> </ol> <p><b>Does the Exit Gate move freely in both directions when pressed and released?</b></p>	Go to step 10.	Repair or replace the Exit Gate as necessary (RRP 6.4 on <a href="#">page 6-69</a> ).
10	<ol style="list-style-type: none"> <li>1. Reinstall the Stacker.</li> </ol> <p><b>Note: Each time the printer's rear cover or front cover is opened and closed with power applied, the printer performs a reset. At the completion of the reset, the Exit Gate toggles between fully open and fully closed positions.</b></p> <ol style="list-style-type: none"> <li>2. Open the printer rear cover. Remove the Duplex Unit if installed.</li> <li>3. Switch the printer power-on.</li> <li>4. Cheat the Rear Cover Interlock and watch the Exit Gate at the end of reset.</li> <li>5. Remove then replace the Rear Cover Interlock cheater.</li> </ol> <p><b>Does the Exit Gate toggle at the completion of each reset?</b></p>	Replace the Stacker PWB (RRP 10.7 on <a href="#">page 6-107</a> ). If the problem persists, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Direction Solenoid (RRP 10.10 on <a href="#">page 6-110</a> ). If the problem persists, replace the Stacker PWB (RRP 10.7 on <a href="#">page 6-107</a> ).

# Jam at Front/Rear; Open Front/Rear Cover to Clear.

## (E7-#: Duplex Jam)

**E7-0:** Paper arrives at the Registration Sensor early from the Duplex Sensor.

**E7-1:** Paper is late to the Duplex Sensor.

**E7-2:** Paper is late off the Duplex Sensor.  
The Duplex Sensor is on at power-on.

**E7-3:** Paper is late to the Registration Sensor from the Duplex Sensor.

### Duplex Jam Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Open the printer and check for paper or other obstructions in the paper path.</li><li>2. Remove the Duplex Unit and check the rear entrance chute to the Paper Handler.</li></ol> <p><b>Is the printer free of jammed paper, paper scraps, or other obstructions?</b></p>	Go to step 2.	Clear all jammed paper, paper scraps, and obstructions from the printer.
2	<p>Check the Duplex Belt, Rollers, and gears. Check for contamination, wear, and obstructions.</p> <p><b>Are the Duplex rollers, gears, and belt clean and in good condition?</b></p>	Go to step 3.	Replace components or Duplex Unit as necessary (RRP 12.1 on <a href="#">page 6-141</a> ).
3	<ol style="list-style-type: none"><li>1. Reinstall the Duplex Unit and enter Service Diagnostics.</li><li>2. Select Engine Test Print and press <b>OK</b>.</li><li>3. Scroll to Print Quantity and press <b>OK</b>.</li><li>4. Set the quantity to 15 and press <b>Back</b>.</li><li>5. Scroll to Duplex and press <b>OK</b>. Set duplex to ON.</li><li>6. Scroll to Print Test Pattern and press <b>OK</b>.</li></ol> <p><b>Does the error code reappear?</b></p>	Clear the jam and press <b>Back</b> . Go to step 4.	Problem solved.
4	<ol style="list-style-type: none"><li>1. Select Motors/Fans Tests.</li><li>2. Scroll to Duplex Motor High and press <b>OK</b>. The motor should run for about three seconds.</li><li>3. Scroll to Duplex Motor Low and press <b>OK</b>. The motor should run for about three seconds.</li></ol> <p><b>Can you hear the Duplex Motor run at both speeds?</b></p>	Go to step 5.	Go to step 6.

## Duplex Jam Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
5	<ol style="list-style-type: none"> <li>1. Select Sensor Tests.</li> <li>2. Select Duplex Sensor.</li> <li>3. Open the Rear Cover and use a narrow strip of paper (approximately 1 inch wide) to actuate and deactivate the Duplex Sensor.</li> </ol> <p><b>Does the message on the display alternate between “With Paper” and “Without Paper” as you press and release the actuator?</b></p>	<p>Perform <b>Registration Sensor</b> on page 3-20 to test the Registration Sensor.</p>	<p>Replace the Duplex Sensor (RRP 12.13 on <a href="#">page 6-155</a>). If the problem persists, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>).</p>
6	<ol style="list-style-type: none"> <li>1. Remove the Duplex Unit, then remove the Duplex Cover (RRP 12.3 on <a href="#">page 6-143</a>).</li> <li>2. Disconnect P/J38 from the Duplex PWB.</li> <li>3. Measure the resistance on the disconnected plug between pin 1 and pin 2; between pin 1 and pin 3; between pin 1 and pin 4; and between pin 1 and pin 5.</li> </ol> <p><b>Are all four readings between 30 and 37 ohms?</b></p>	<p>Replace the Duplex PWB (RRP 12.4 on <a href="#">page 6-144</a>). If the problem persists, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>).</p>	<p>Replace the Duplex Motor Assembly (RRP 12.8 on <a href="#">page 6-149</a>).</p>

## Paper Size Jam; Check Size and Open Rear Cover to Clear. (PSE-1)

### (PSE-1: Paper size error)

There is a conflict between the size of the paper detected by the printer, and the length of time the Registration Sensor is actuated.

### Paper Size Error Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<p><b>Does the problem appear when using Tray 1, 2, or 3?</b></p>	Go to step 3.	Go to step 2.
2	<ol style="list-style-type: none"> <li>1. Verify the size of paper currently in the MPT Tray.</li> <li>2. Select Menus and press <b>OK</b>, then</li> <li>3. Select Printer Setup Menu and press <b>OK</b>.</li> <li>4. Select Tray Setup Menu and press <b>OK</b>.</li> <li>5. Select MPT Setup Menu and press <b>OK</b>.</li> <li>6. Select Change Paper Size and press <b>OK</b>.</li> </ol> <p><b>Does the paper size checked in the MPT Setup Menu match the size actually in the MPT?</b></p>	<p>Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>).</p>	<p>Set MPT size to the size of paper actually installed, then press <b>OK</b>.</p>

## Paper Size Error Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
3	<b>Is the paper size in the problem tray within printer specifications?</b>	Go to step 4.	Replace with paper that meets specifications.
4	Check the side guides and the Paper Stack End Guide in the problem tray. <b>Are all guides properly set for the size of paper installed?</b>	Go to step 5.	Properly set the guides.
5	Check the size cam on the left side of the paper tray (see the Paper Size Actuators table below). <b>Are the cams in good condition (not broken) and do they move freely as the paper tray end guide is moved.</b>	Go to step 6.	Replace the paper tray (PL 2.1 on <a href="#">page 7-6/PL 11.1 on page 7-26</a> ).
6	1. Reinstall the paper tray. 2. Enter Service Diagnostics and select Sensor Tests. 3. Scroll to Paper Tray Size Read and press <b>OK</b> . 4. Select "Tray 1 Size" and press <b>OK</b> . 5. Press "Back" and select another tray size until all installed trays are tested.  <b>Does the paper size displayed on the Front Panel display match the size of the paper actually loaded in the tray?</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Tray Size PWB (RRP 3.13 on <a href="#">page 6-42/ RRP 11.19 on page 6-139</a> ).

## Close Front Cover/Close Rear Cover.

### (Close Front Cover/Close Rear Cover)

#### Close Front/Rear Cover Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	1. Open and close the Front Cover. 2. Inspect the movement of the Interlock Switch. <b>Does the actuator tab on the Front Cover press down on the Interlock Switch lever?</b>	Go to step 2.	Replace the Front Cover Assembly (PL 1.1 on <a href="#">page 7-2</a> ).
2	1. Open and close the Rear Cover. 2. Inspect the movement of the Interlock Switch. <b>Does the actuator tab on the Rear Cover press down on the Interlock Switch lever?</b>	Go to step 3.	Replace the Rear Cover Assembly (PL 1.2 on <a href="#">page 7-4</a> ).
3	1. Enter Service Diagnostics and select Sensor Tests. 2. Scroll to Rear Cover Switch test and press <b>OK</b> . 3. Open and close the Rear Cover. <b>Does the message on the display alternate between "Closed" and "Open" as you open and close the Rear Cover?</b>	Go to step 5.	Go to step 4.

## Close Front/Rear Cover Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
4	<ol style="list-style-type: none"> <li>1. Switch the printer power OFF.</li> <li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li> <li>3. Disconnect P/J30 from the Engine Logic Board.</li> <li>4. Measure the resistance between pins 1 and 2 on the disconnected plug as you open and close the Rear Cover.</li> </ol> <p><b>Is there continuity when the Rear Cover is closed and infinity when the Rear Cover is open?</b></p>	<p>Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>).</p>	<p>Check the wiring between P/J30 and the Rear Cover Interlock Switch. Repair or replace the wiring or interlock switch (RRP 9.10 on <a href="#">page 6-97</a>) as required.</p>
5	<p>Open and close the Front Cover.</p> <p><b>Does the message on the display alternate between “Closed” and “Open” as you open and close the Front Cover?</b></p>	<p>Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>).</p>	<p>Go to step 6.</p>
6	<ol style="list-style-type: none"> <li>1. Switch the printer power OFF.</li> <li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li> <li>3. Disconnect P/J284 from the LVPS PWB.</li> <li>4. Measure the resistance between pins 1 and 2 on the disconnected plug as you open and close the Front Cover.</li> </ol> <p><b>Is there continuity when the Front Cover is closed and infinity when the Front Cover is open?</b></p>	<p>Go to step 7.</p>	<p>Check the wiring between P/J284 and the Front Cover Interlock Switch. Repair or replace the wiring or interlock switch (RRP 9.9 on <a href="#">page 6-96</a>) as required.</p>
7	<ol style="list-style-type: none"> <li>1. Connect P/J284 to the LVPS.</li> <li>2. Switch the printer power-on.</li> <li>3. On the Engine Logic Board, check the voltage between P/J28 pin 1 and frame ground.</li> </ol> <p><b>Is the voltage +24 VDC?</b></p>	<p>Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>).</p>	<p>Replace the LVPS (RRP 9.5 on <a href="#">page 6-91</a>).</p>

# Install or Reseat Print Cartridge.

## (J3: Missing Print Cartridge)

1. Print Cartridge is not installed or seated correctly.
2. The installed Print Cartridge is not the correct one.

### Print Cartridge Installation Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Open the Front Cover and remove the Print Cartridge.</li><li>2. Inspect the tab on the top center of the Print Cartridge that actuates the Print Cartridge Sensor Assembly.</li></ol> <p><b>Is the tab on the Print Cartridge intact?</b></p>	Go to step 2.	Replace the Print Cartridge (PL 8.1 on <a href="#">page 7-20</a> ).
2	<p>Press and release the Print Cartridge Sensor Assembly Actuator.</p> <p><b>Does the Print Cartridge Sensor Assembly Actuator move smoothly?</b></p>	Go to step 3.	Replace the Print Cartridge Sensor Assembly (RRP 7.3 on <a href="#">page 6-81</a> ).
3	<ol style="list-style-type: none"><li>1. Enter Service Diagnostics and select Sensor Tests.</li><li>2. Scroll to Print Cartridge Sensor test and press <b>OK</b>.</li><li>3. Insert and remove the Print Cartridge a few times.</li></ol> <p><b>Does the display alternate between “Not Installed” and “Installed” as you remove and replace the Print Cartridge?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 4.
4	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), the Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li><li>3. Install the Print Cartridge. Leave the Front Cover open.</li><li>4. Disconnect P/J25 from the Engine Logic Board.</li><li>5. On the Engine Logic Board, check for continuity between J21-4 and J25-3, and J25-2 and J25-1 as you insert and remove the Print Cartridge.</li></ol> <p><b>Is there continuity between J25-4 and J25-3, and J25-2 and J25-1 when you insert the cartridge and no continuity when you remove the cartridge?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 5.
5	<p><b>Is the Print Cartridge a Xerox Phaser 4400 Print Cartridge?</b></p>	Replace the Print Cartridge Sensor Assembly together with the harness (RRP 7.4 on <a href="#">page 6-81</a> ).	Replace Print Cartridge with a Xerox Phaser 4400 Print Cartridge (PL 8.1 on <a href="#">page 7-20</a> ).

# Replace Print Cartridge.

## (J5: Toner Low)

The Print Cartridge is in a low toner condition.

### Print Cartridge Low Toner Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	Install a new Print Cartridge. <b>Does the Replace Print Cartridge message still appear?</b>	Go to step 2.	Problem solved.
2	1. Remove the Front Cover (RRP 1.6 on <a href="#">page 6-11</a> ) and the Left Front Cover (RRP 1.7 on <a href="#">page 6-12</a> ). 2. Cheat the Front Cover Interlock Switch. 3. On the Connector PWB, check the voltage between P/J42 pin 4 and frame ground. <b>Is the voltage 0.0 VDC with the print cartridge installed and +3.3 VDC with the print cartridge removed?</b>	Go to step 5.	Go to step 3.
3	Check the voltage between P/J42 pin 3 and pin 1. <b>Is the voltage +24 VDC?</b>	Replace the Toner Sensor (RRP 5.2 on <a href="#">page 6-59</a> ).	Go to step 4.
4	On the Connector PWB, check the voltage between P/J231 pin 11 and pin 12. <b>Is the voltage +24 VDC?</b>	Replace the Connector PWB (RRP 9.7 on <a href="#">page 6-94</a> ).	Check the Connector Harness Assembly. If OK, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).
5	On the connector PWB, check the voltage between P/J231 pin 9 and frame ground. <b>Is the voltage 0.0 VDC with the print cartridge installed and +3.3 VDC with the print cartridge removed?</b>	Check the Connector Harness Assembly. If OK, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Connector PWB (RRP 9.7 on <a href="#">page 6-94</a> ).

# Toner is Low.

## (J5: Toner Low)

The Print Cartridge is almost empty.

### Print Cartridge Low Toner Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	Install a new Print Cartridge. <b>Does the Replace Print Cartridge message still appear?</b>	Go to step 2.	Problem solved.
2	1. Remove the Front Cover (RRP 1.6 on <a href="#">page 6-11</a> ) and the Left Front Cover (RRP 1.7 on <a href="#">page 6-12</a> ). 2. Cheat the Front Cover Interlock Switch. 3. On the Connector PWB, check the voltage between P/J42 pin 4 and frame ground. <b>Is the voltage 0.0 VDC with the print cartridge installed and +3.3 VDC with the print cartridge removed?</b>	Go to step 5.	Go to step 3.
3	Check the voltage between P/J42 pin 3 and pin 1. <b>Is the voltage +24 VDC?</b>	Replace the Toner Sensor (RRP 5.2 on <a href="#">page 6-59</a> ).	Go to step 4.
4	On the Connector PWB, check the voltage between P/J231 pin 11 and pin 12. <b>Is the voltage +24 VDC?</b>	Replace the Connector PWB (RRP 9.7 on <a href="#">page 6-94</a> ).	Check the Connector Harness Assembly. If OK, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).
5	On the connector PWB, check the voltage between P/J231 pin 9 and frame ground. <b>Is the voltage 0.0 VDC with the print cartridge installed and +3.3 VDC with the print cartridge removed?</b>	Check the Connector Harness Assembly. If OK, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Connector PWB (RRP 9.7 on <a href="#">page 6-94</a> ).

## Maintenance Kit is Near End of Life.

Indicates that the parts that make up the Maintenance Kit (Fuser, Transfer Roller, Feed and Retard Rollers) are nearing the end of their rated useful life.

### Maintenance Kit Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	1. Install the Maintenance Kit in accordance with the instructions included with it. <b>Does the warning message reappear?</b>	Go to step 2.	Problem solved.
2	Perform the Fuser Reset. <b>Does the warning message continue to appear?</b>	Go to step 3.	Problem solved.
3	Replace the following in order: <ul style="list-style-type: none"><li>■ Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>)</li><li>■ Image Processor Board (RRP 9.2 on <a href="#">page 6-88</a>)</li><li>■ Front Panel (RRP x.x on <a href="#">page 6-14</a>).</li></ul>		

## Install or Reseat the Duplex Unit.

### (E9-1: Duplex Unit Fail)

Duplex Unit was removed while power was on.

### Duplex Unit Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	1. Switch the printer power OFF. 2. Remove and reinstall the Duplex Unit. 3. Switch the printer power-on. 4. Print Configuration Pages. <b>Is the Duplex Unit listed on the Configuration Page (2-sided Printing)?</b>	Problem solved.	Go to step 2.
2	1. Enter Service Diagnostics. 2. Select Sensor Tests and press <b>OK</b> . 3. Scroll to Duplex Unit Presence and press <b>OK</b> . <b>Does the display read “Installed” with the unit present, and “Not Installed” without the unit present?</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 3.
3	Check the wiring harnesses. <b>Are the wiring harnesses in good condition?</b>	Replace the Duplex PWB (RRP 12.4, <a href="#">page 6-144</a> ). If the problem persists, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Duplex Harness Assembly, J32/P341 (RRP 9.12, <a href="#">page 6-99</a> ).

# Stacker Failure.

## (E9-2: Stacker Unit Fail.)

Stacker has failed or was removed while power is on.)

Stacker removed while power is on.

### Stacker Failure Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Remove and reinstall the Stacker.</li><li>3. Switch the printer power-on.</li><li>4. Print a Configuration Page.</li></ol> <p><b>Is the Stacker listed on the Configuration Page?</b></p>	Problem solved.	Go to step 2.
2	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li><li>3. Remove the Stacker from the printer. Switch the printer power-on. On the Engine Logic Board, check the voltage between P/J35 pin 1 and frame ground.</li></ol> <p><b>Is the voltage 3.3 VDC.</b></p>	Go to step 3.	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).
3	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Properly install the Stacker on the printer.</li><li>3. Switch the printer power-on.</li><li>4. On the Engine Logic Board, check the voltage between P/J35 pin 1 and frame ground.</li></ol> <p><b>Is the voltage 0.0 VDC.</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Stacker PWB (RRP 10.7 <a href="#">page 6-107</a> ).

# Install or Reseat the Envelope Feeder.

## (E9-E: Envelope Feeder Fail/Re-install.)

Envelope feeder failed or was removed while power is on.

### Envelope Feeder Failure Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Switch the Printer power OFF.</li><li>2. Remove and reinstall the envelope feeder.</li><li>3. Switch the Printer power-on.</li><li>4. Print a Configuration Page.</li></ol> <p><b>Is the Envelope Feeder listed on the Configuration Pages?</b></p>	Problem solved.	Go to step 2.
2	<ol style="list-style-type: none"><li>1. Switch the Printer power OFF.</li><li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li><li>3. Switch the Printer power-on.</li><li>4. Check the voltage on the Engine Logic Board between P/J23 Pin 4 and frame ground.</li></ol> <p><b>Is the voltage 0.0 VDC?</b></p>	Replace the Envelope Feeder PWB (RRP 13.3 on <a href="#">page 6-159</a> ).	Go to step 3.

## Envelope Feeder Failure Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
3	<ol style="list-style-type: none"><li>1. Switch the Printer power OFF.</li><li>2. Remove the Envelope Feeder.</li><li>3. Check for continuity between J418 Pin 3 (Envelope Connector Assembly) and P/J23 Pin 4 on the Engine Logic Board.</li></ol> <p><b>Is there continuity between the two pins?</b></p>	Replace the Envelope Feeder PWB (RRP 13.3 on <a href="#">page 6-159</a> ).	Go to step 4.
4	<ol style="list-style-type: none"><li>1. Remove the Front Cover (RRP 1.6 on <a href="#">page 6-11</a>) and the Left Front Cover (RRP 1.7 on <a href="#">page 6-12</a>).</li><li>2. Check for continuity between P/J 41 Pin 6 on the Connector PWB and P/J 23 Pin 4.</li></ol> <p><b>Is there continuity between the two pins?</b></p>	Replace the Envelope Connector Assembly (RRP 4.10 on <a href="#">page 6-56</a> ).	Go to step 5.
5	Check the Connector Harness Assembly for proper connection and for defective wires. <p><b>Is the Harness in good condition?</b></p>	Replace the Connector PWB (RRP 9.7 on <a href="#">page 6-94</a> ).	Repair or replace if necessary.

## Standard Output Tray is Full. Unload Paper.

### (Standard Output Tray Full)

Error message indicates the output tray is full.

### Output Tray Full Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<p><b>Is there a paper stack in the standard bin actuating the Output Tray Full Sensor?</b></p>	Remove the paper stack.	Go to step 2.
2	<p><b>Is the paper curled?</b></p>	Go to step 4.	Go to step 3.
3	Lift and release the Output Tray Full Actuator a few times. <p><b>Does the actuator move freely?</b></p>	Go to step 5.	Replace Output Tray Full Actuator (RRP 6.8 on <a href="#">page 6-76</a> ) or Output Tray Full Sensor (RRP 6.6 on <a href="#">page 6-72</a> ), as necessary.
4	Replace paper in paper tray with fresh dry paper. Run test prints. <p><b>Does the error code reappear?</b></p>	Go to step 5.	Problem solved.

## Output Tray Full Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
5	<ol style="list-style-type: none"><li>1. Enter Service Diagnostics and select Sensor Tests.</li><li>2. Scroll to Output Tray Full Sensor and press <b>OK</b>.</li><li>3. Manually actuate and deactuate the Output Tray Full Actuator.</li></ol> <p><b>Does the message on the display alternate between “Full” and “Not Full” as you lift and release the actuator (the indication may have a short delay because of the sensor circuit)?</b></p>	Replace Engine Logic Board (RRP 9.3 on page 6-89).	Go to <a href="#">Output Tray Full Sensor</a> on page 3-22.

## Tray [#] Paper is Low.

Paper stack in the Paper Tray Assembly is below 50 ±30 sheets.

### Low Paper Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	Fill the tray in the affected position. <b>Does the message reappear?</b>	Go to step 2.	Problem solved.
2	<ol style="list-style-type: none"><li>1. Remove the affected tray Assembly.</li><li>2. Push up the Low Paper Actuator manually and then release.</li></ol> <p><b>The Low Paper Actuator moves smoothly.</b></p>	Go to step 3.	Repair or replace the Low Paper Sensor Assembly (RRP 3.5, <a href="#">page 6-32/</a> RRP 11.14, <a href="#">page 6-133</a> ).
3	<ol style="list-style-type: none"><li>1. Enter Service Diagnostics and select Sensor Tests.</li><li>2. Scroll to Tray [#] Low Paper Sensor and press <b>OK</b>.</li><li>3. Press the Low Paper Actuator manually and then release.</li></ol> <p><b>Does the message on the Front Panel display alternate between “Low” and “Not Low” as you press the Low Paper Actuator?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 4.
4	Check the wiring associated with the specific Low Paper Sensor. <b>Is the wiring OK?</b>	Replace the Low Paper Sensor (RRP 3.5, <a href="#">page 6-32/</a> RRP 11.14, <a href="#">page 6-133</a> )	Replace the faulty wiring.

## Tray 2 (or Tray 3) Paper is Low.

Paper stack in Tray 2 and/or Tray 3 is below 50 ±30 sheets.

### Low Paper (Tray 2 or Tray 3) Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	Fill the affected paper tray with fresh paper. <b>Is the Error Message still displayed?</b>	Go to step 2.	Problem solved.
2	1. Remove the paper tray from affected Feeder Assembly. 2. Manually push up and release the low paper actuator. <b>Does the low paper actuator move smoothly up and down?</b>	Go to step 3.	Inspect the Low Paper Actuator. Repair or replace as required.
3	1. Enter Service Diagnostics and select Sensor Tests. 2. Scroll to Tray 2 (or Tray 3) Low Paper Sensor and press <b>OK</b> . 3. Press and release the Low Paper Actuator. <b>Does the message on the Front Panel display alternate between Low and Not Low as you press and release the actuator?</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 4.
4	1. Switch the printer power OFF. 2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a> ), Left Cover (RRP 1.2 on <a href="#">page 6-7</a> ), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a> ). 3. Switch the printer power-on. 4. On the Engine Logic Board, check the voltage between P/J33 pin 8 and frame ground. <b>Is the voltage +3.3 VDC?</b>	Go to step 6.	Go to step 5.
5	On the Engine Logic Board, check the voltage between P/J28 pin 10 and frame ground. <b>Is the voltage +3.3 VDC?</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the LVPS (RRP 9.5 on <a href="#">page 6-91</a> ).
6	1. Enter Service Diagnostics and select Sensor Tests. 2. Scroll to Tray 2 (or Tray 3) Low Paper Sensor and press <b>OK</b> . 3. As you actuate the Low Paper Sensor, check the voltages at the following locations on the Engine Logic Board: ■ For Tray 2, check between P/J33 pin 9 and frame ground. ■ For Tray 3, check between P/J33 pin 10 and frame ground. <b>Does the voltage change from +3.3 VDC to 0.0 VDC?</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Low Paper Sensor (RRP 11.14, <a href="#">page 6-133</a> ) for the affected tray. If the problem persists, replace the Feeder PWB (RRP 11.9, <a href="#">page 6-128</a> ) then the Size PWB (RRP 11.19, <a href="#">page 6-139</a> ).

# No Paper in Tray [#].

A tray (Tray 1, Tray 2, or Tray 3) incorrectly indicates that it is empty.

## Tray [#] Empty Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<b>Does the problem appear when using Tray 2 or Tray 3?</b>	Go to step 7.	Go to step 2.
2	Check the paper level in Tray 1. <b>Is there paper in Tray 1?</b>	Go to step 3.	Load paper into Tray 1.
3	1. Enter Service Diagnostics and select Test Print. 2. Print a test print from Tray 1. <b>Does the error message reappear?</b>	Go to step 4.	Return to "Service Flowchart" and restart.
4	1. Remove Tray 1 from the printer. 2. Remove all paper from the tray. 3. Reinsert Tray 1 into the printer. 4. From the rear of the printer, watch the Tray 1 bottom plate. <b>Is the Bottom Plate raised fully and evenly?</b>	Go to step 5.	Go to <a href="#">Tray Motor Assembly Checkout</a> on page 3-26.
5	1. Remove Tray 1. 2. Manually actuate the Tray 1 No Paper sensor. <b>Does the No Paper Actuator move smoothly?</b>	Go to step 6.	Replace the Tray 1 No Paper Actuator (RRP 3.3 on <a href="#">page 6-30</a> ).
6	1. Enter Service Diagnostics and select Sensor Tests. 2. Scroll to Tray 1 No Paper and press <b>OK</b> . 3. Manually actuate the Tray 1 No Paper Sensor. <b>Does the message on the display alternate between "With paper" and "Without paper" as you press and release the actuator?</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to <a href="#">Tray 1 No Paper Sensor</a> on page 3-22.
7	Check the paper level in Tray 2/3. <b>Is there paper in the tray?</b>	Go to step 8.	Load paper into Tray 2/3.
8	1. Enter Service Diagnostics and select Test Print. 2. Print a test print from Tray 2/3. <b>Does the error message reappear?</b>	Go to step 9.	Return to "Service Flowchart" and restart.
9	Remove Tray 2/3 from the printer. Remove all paper from the tray. Reinsert the Tray into the printer. From the rear of the printer, watch the tray bottom plate. <b>Is the Bottom Plate raised fully and evenly?</b>	Go to step 10.	Go to <a href="#">Tray Motor Assembly Checkout</a> on page 3-26.

## Tray [#] Empty Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
10	<ol style="list-style-type: none"> <li>1. Remove Tray 2/3.</li> <li>2. Manually actuate the No Paper Sensor.</li> </ol> <p><b>Does the No Paper Actuator move smoothly?</b></p>	Go to step 11.	Replace the Tray 2/3 No Paper Actuator (RRP 11.7 on <a href="#">page 6-126</a> ).
11	<ol style="list-style-type: none"> <li>1. Enter Service Diagnostics and select Sensor Tests.</li> <li>2. Scroll to Tray 2 No Paper or Tray 3 No Paper and press <b>OK</b>.</li> <li>3. Manually actuate the Tray 2/3 No Paper Sensor.</li> </ol> <p><b>Does the message on the display alternate between “With paper” and “Without paper” as you press and release the actuator?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the following in order for the problem feeder assembly: <ul style="list-style-type: none"> <li>■ Feeder PWB (RRP 11.9 on <a href="#">page 6-128</a>)</li> <li>■ Size PWB (RRP 11.19 on <a href="#">page 6-139</a>)</li> </ul>

## Load Tray [#] with [paper size] [paper type].

There is a conflict between the size of the paper detected by the Size Switches, and the length of paper detected by the length of time the Registration Sensor is actuated.

### Paper Size Error Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<b>Does the problem appear when using Tray 1, 2, or 3?</b>	Go to step 2.	Go to step 3.
2	<ol style="list-style-type: none"> <li>1. Verify the size of paper currently in the MPT Tray.</li> <li>2. Select Menus and press <b>OK</b>, then</li> <li>3. Select Printer Setup Menu and press <b>OK</b>.</li> <li>4. Select Tray Setup Menu and press <b>OK</b>.</li> <li>5. Select MPT Setup Menu and press <b>OK</b>.</li> </ol> <p><b>Does the paper size checked in the MPT Setup Menu match the size actually in the MPT?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Set MPT size to the size of paper actually installed, then press <b>OK</b> .
3	<b>Is the paper size in the problem tray within printer specifications?</b>	Go to step 4.	Replace with paper that meets specifications.
4	Check the side guides and the Paper Stack End Guide in the problem tray. <p><b>Are all guides properly set for the size of paper installed?</b></p>	Go to step 5.	Properly set the guides.
5	Check the size cam on the left side of the paper tray (see the Paper Size Actuators table below). <p><b>Are the cams in good condition (not broken) and do they move freely as the paper tray end guide is moved.</b></p>	Go to step 6.	Replace the paper tray (PL 2.1 on <a href="#">page 7-6/PL 11.1 on <a href="#">page 7-26</a></a> ).

## Paper Size Error Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
6	<ol style="list-style-type: none"> <li>1. Reinstall the paper tray.</li> <li>2. Enter Service Diagnostics and select Sensor Tests.</li> <li>3. Scroll to Paper Tray Size Read and press <b>OK</b>.</li> <li>4. Select "Tray 1 Size" and press <b>OK</b>.</li> <li>5. Press "Back" and select another tray size until all installed trays are tested.</li> </ol> <p><b>Does the paper size displayed on the Front Panel display match the size of the paper actually loaded in the tray?</b></p>	Replace the Engine Logic Board (RRP 9.3 on page 6-89).	Replace the Tray Size PWB (RRP 3.13 on page 6-42/ RRP 11.19 on page 6-139).

### Paper Size Actuators

Actuator Cam Extended	B5 SEF	A5 SEF	13" SEF	14" SEF	8.5" SEF	A4 SEF
Top	X		X			
Middle			X	X		X
Bottom					X	X

## Tray [#] Failure. Open and Close Tray [#].

### (C3-[#]E Tray [#] Not In)

A Tray Assembly (Tray 1, 2, or 3) is not in place.

### Tray Failure Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"> <li>1. Enter Service Diagnostics,</li> <li>2. Print a test print from every tray.</li> </ol> <p><b>Does the Error Code specify Tray 2 or Tray 3?</b></p>	Go to step 11.	Go to step 2.
2	<p>Remove and reinstall Tray 1.</p> <p><b>Does the C3 error code still appear?</b></p>	Go to step 3.	Problem solved.
3	<p>Measure the voltage from the lower contact of the Feeder Socket (P/J672) to frame ground.</p> <p><b>Is the voltage +24 VDC?</b></p>	Go to step 8.	Go to step 4.
4	<p>Measure the voltage from P/J33 pin 6 on the Engine Logic Board to frame ground.</p> <p><b>Is the voltage +24 VDC?</b></p>	Go to step 5.	Go to <b>DC Power (LVPS)</b> on page 3-4.
5	<ol style="list-style-type: none"> <li>1. Switch off the printer power.</li> <li>2. Remove the Size Sensor Housing (RRP 3.11 on page 6-40).</li> <li>3. Measure continuity between the disconnected P/J33 pin 6 and P/J331 pin 12 on the Tray 1 Size PWB.</li> </ol> <p><b>Is there continuity between the two pins?</b></p>	Go to step 6.	Repair or replace Feeder Harness Assembly (PL 9.1 on page 7-22).

## Tray Failure Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
6	On the Tray 1 Size PWB, measure continuity between P/J331 pin 12 to P/J61 pin 1. <b>Is there continuity between the two pins?</b>	Go to step 7.	Replace the Tray 1 Size PWB (RRP 3.13 on <a href="#">page 6-42</a> ).
7	Check the wiring between P/J67 pin 5 on the Tray 1 Feeder PWB and the bottom pin on the Paper Feeder Socket (P/J672). <b>Is the wiring in good condition?</b>	Replace the Tray 1 Feeder PWB (RRP 3.9 on <a href="#">page 6-37</a> ).	Replace the Socket and Harness (PL 3.1 on <a href="#">page 7-10</a> ).
8	On the paper tray, measure the resistance between the middle and bottom terminals on the Paper Feeder Socket. <b>Is the resistance 90 ±15 ohms?</b>	Go to step 9.	Go to <a href="#">Tray Motor Assembly Checkout</a> on page 3-26.
9	On the paper tray, measure the resistance between the top and bottom terminals on the Paper Feeder Socket. <b>Is there continuity between the two pins?</b>	Go to step 10.	Replace the Socket and Harness (PL 3.1 on <a href="#">page 7-10</a> ).
10	Replace the following parts one at a time until the problem is resolved: <ul style="list-style-type: none"> <li>■ Stack Height Sensor (RRP 3.4 on <a href="#">page 6-31</a>)</li> <li>■ Feeder PWB (RRP 3.9 on <a href="#">page 6-37</a>)</li> <li>■ Size 1 PWB (RRP 3.13 on <a href="#">page 6-42</a>)</li> <li>■ Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>)</li> </ul>		
11	Remove and reinstall the Tray indicated. <b>Does the C3 error code still appear?</b>	Go to step 12.	Problem solved.
12	1. Exchange Tray 1 with the Tray generating the "C3" code. 2. Print a test print from each tray. <b>Does the error code now indicate a Tray 1 failure?</b>	Go to step 19.	Go to step 13.
13	<b>Does the error code indicate a Tray 2 failure?</b>	Go to step 16.	Go to step 14.
14	1. Remove Tray 3 from the feeder. 2. Check the voltage between the lower terminal on the Paper Feeder Connector and frame ground. <b>Is the voltage +24 VDC?</b>	Go to step 18.	Go to step 15.
15	Check the wiring harness between the Tray 2 Size PWB (P/J53) and the Tray 3 Size PWB (P/J54). <b>Is the harness in good condition?</b>	Replace the Tray 3 Size PWB (RRP 11.19 on <a href="#">page 6-139</a> ), then the Tray 3 Feeder PWB (RRP 11.9 on <a href="#">page 6-128</a> ).	Replace the Size Harness Assembly (PL 11.1 on <a href="#">page 7-27</a> ).

## Tray Failure Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
16	<ol style="list-style-type: none"> <li>1. Remove Tray 2 from the feeder.</li> <li>2. Check the voltage between the lower terminal on the Feeder Connector and frame ground.</li> </ol> <p><b>Is the voltage +24 VDC?</b></p>	Go to step 18.	Go to step 17.
17	<p>Check the wiring harness between the Tray 1 Size PWB (P/J51) and the Tray 2 Size PWB (P/J52).</p> <p><b>Is the harness in good condition?</b></p>	Replace the Tray 2 Size PWB (RRP 11.19 on <a href="#">page 6-139</a> ) then the Tray 2 Feeder PWB (RRP 11.9 on <a href="#">page 6-128</a> ).	Replace the Size Harness Assembly (PL 11.1 on <a href="#">page 7-27</a> ).
18	<p>Replace the following components, in order, until the problem is resolved:</p> <ul style="list-style-type: none"> <li>■ Stack Height Sensor (RRP 11.13 on <a href="#">page 6-132</a>)</li> <li>■ Feeder PWB (RRP 11.9 on <a href="#">page 6-128</a>)</li> <li>■ Size PWB (RRP 11.19 on <a href="#">page 6-139</a>)</li> <li>■ Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>)</li> </ul>		
19	<p>Remove the tray now occupying the Tray 1 position and continue with <a href="#">Tray Motor Assembly Checkout</a> on page 3-26.</p>		

## Main Motor Failure.

### (U1 Motor Fail/Power Off)

Main Motor speed is less than specified RPM after 1.3 seconds.

There is a problem with the Main Motor.

### Main Motor Failure Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"> <li>1. Switch the printer power OFF.</li> <li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), the Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li> <li>3. Open the Rear Cover and, if installed, remove the Duplex Unit.</li> <li>4. Manually rotate the rotor of the Main Motor clockwise (as viewed from the left side of the printer).</li> </ol> <p><b>Does the rotor of the Main Motor rotate smoothly?</b></p>	Go to step 5.	Go to step 2.
2	<ol style="list-style-type: none"> <li>1. Open the Front Cover and remove Print Cartridge.</li> <li>2. Manually rotate the rotor of motor clockwise.</li> </ol> <p><b>Does the rotor of the Main Motor rotate smoothly?</b></p>	Replace the Print Cartridge.	Go to step 3.

## Main Motor Failure Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
3	<ol style="list-style-type: none"> <li>1. Remove the Fuser Assembly (RRP 6.2 on <a href="#">page 6-66</a>).</li> <li>2. Manually rotate the rotor of the Motor clockwise.</li> </ol> <p><b>Does the rotor of the Main Motor rotate smoothly?</b></p>	Replace the Fuser Assembly (RRP 6.2 on <a href="#">page 6-66</a> ).	Go to step 4.
4	<ol style="list-style-type: none"> <li>1. Remove the Main Motor (RRP 8.1 on <a href="#">page 6-84</a>).</li> </ol> <p>Manually rotate the rotor of the Motor clockwise.</p> <p><b>Does the rotor of the Main Motor rotate smoothly?</b></p>	Replace the Main Drive Gear Assembly (RRP 8.2 on <a href="#">page 6-85</a> ).	Replace the Main Motor (RRP 8.1 on <a href="#">page 6-84</a> ).
5	<ol style="list-style-type: none"> <li>1. Open the Front Cover and remove the Print Cartridge. Rotate the Metal Registration Roller manually.</li> </ol> <p><b>Do the Metal and Rubber Registration Rolls rotate smoothly?</b></p>	Go to step 6.	Replace the Registration Rolls (RRP 5.6 on <a href="#">page 6-62</a> ) or clutch (RRP 5.5 on <a href="#">page 6-62</a> ), as necessary.
6	<ol style="list-style-type: none"> <li>1. With the Front Cover open, cheat the Front Cover Interlock.</li> <li>2. Enter Service Diagnostics and select Motor/Fans Tests.</li> <li>3. Scroll to Main Motor and press <b>OK</b>.</li> <li>4. Visually inspect the Main Motor and Main Drive Gears.</li> </ol> <p><b>Do the Main Motor and drive gears run smoothly and are all drive gears in good condition?</b></p>	Go to step 7.	Go to RRP 8.1 on <a href="#">page 6-84</a> and RRP 8.2 on <a href="#">page 6-85</a> .
7	<ol style="list-style-type: none"> <li>1. Press the Back key twice to return to top Menu.</li> <li>2. Select Main Motor+Clutches/Sol Tests.</li> <li>3. Scroll to Motor+MPT Sol and press <b>OK</b>.</li> </ol> <p><b>Does the MPT Feed Roller Assembly rotate smoothly?</b></p>	Go to step 8.	Replace the MPT Feed Roller components as necessary (RRP 4.2, <a href="#">page 6-45/</a> RRP 4.3, <a href="#">page 6-47</a> ).
8	<ol style="list-style-type: none"> <li>1. Scroll to Motor+Tray 1 Turn Roll and press <b>OK</b>.</li> </ol> <p>Note: If optional feeders are installed, all turn rollers should actuate when you press <b>OK</b>.</p> <p><b>Do all Turn Roller Shafts rotate smoothly?</b></p>	Go to step 9.	Repair or replace the appropriate Turn Roller Assembly (RRP 3.2, <a href="#">page 6-29</a> or RRP 11.8, <a href="#">page 6-127</a> ).

## Main Motor Failure Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
9	Scroll to Motor+Registration and press <b>OK</b> . <b>Does the Registration Roller rotate smoothly?</b>	Go to step 10.	Repair or replace the Registration Rolls (RRP 5.6, <a href="#">page 6-62</a> ) as necessary.
10	1. Remove paper from all paper trays. 2. Scroll to Motor+Tray 1 Feed and press <b>OK</b> . <b>Does the Main Motor rotate smoothly?</b>	Go to step 11.	Repair or replace the Tray 1 Feed Clutch or Feed Shaft (RRP 3.6, <a href="#">page 6-33</a> ).
11	<b>Does the printer have a Tray 2?</b>	Go to step 12.	Replace the Main Motor Assembly (RRP 8.1, <a href="#">page 6-84</a> ).
12	Scroll to Motor+Tray 2 Feed and press <b>OK</b> . <b>Does the Main Motor rotate smoothly?</b>	Go to step 13.	Repair or replace the Tray 2 Feed Clutch or Feed Shaft (RRP 11.10, <a href="#">page 6-129</a> ).
13	<b>Does the printer have a Tray 3?</b>	Go to step 14.	Replace the Main Motor Assembly (RRP 8.1, <a href="#">page 6-84</a> ).
14	Scroll to Motor+Tray 3 Feed and press <b>OK</b> . <b>Does the Main Motor rotate smoothly?</b>	Go to <a href="#">Main Motor Assembly</a> on page 3-15.	Repair or replace the Tray 3 Feed Clutch or Feed Shaft (RRP 3.6, <a href="#">page 6-33</a> ).

# Laser Unit Failure.

## (U2 Laser Fail/Power Off)

Laser Failure at warm-up:

- Transmitting /BD signal is longer than specified value for 10 sec. + t1.
- The laser power does not reach the specified value.

Laser Failure after warm-up:

- Laser signal intervals become longer than the Fail time interval after Laser warm-up is completed.

### Laser Failure Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Enter Service Diagnostics and</li><li>2. Select Engine NVRAM Adjustments.</li><li>3. Scroll to Laser Power and press <b>OK</b>.</li></ol> <p><b>Is the value for Laser Power set to “10”?</b></p>	Go to step 2.	Set the value to 10. If the problem persists, replace the Engine Logic Board (RRP 9.3, <a href="#">page 6-89</a> ).
2	Select Motors/Fans Tests then Laser Scan Motor. <b>Can you hear the Laser Scan Motor spin up?</b>	Go to step 3.	Go to <a href="#">Laser Assembly</a> on <a href="#">page 3-17</a> .
3	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), the Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li><li>3. Disconnect P/J21 from the Engine Logic Board. Switch the printer power-on.</li><li>4. On the Engine Logic Board, check the voltage between P21-6 and frame ground.</li></ol> <p><b>Is the voltage +5.0 VDC?</b></p>	Go to <a href="#">Laser Assembly</a> on <a href="#">page 3-17</a> .	Go to step 4.
4	On the Engine Logic Board, check the voltage between P25 pin 4 and frame ground. <b>Is the voltage +5.0 VDC?</b>	Go to step 6.	Go to step 5.
5	On the Engine Logic Board, check the voltage between P28 pin 7 and frame ground. <b>Is the voltage +5.0 VDC?</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the LVPS (RRP 9.5 on <a href="#">page 6-91</a> ).
6	On the Engine Logic Board, check the voltage between P25 pin 3 and frame ground. <b>Is the voltage +5.0 VDC?</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to <a href="#">Install or Reseat Print Cartridge</a> on <a href="#">page 2-33</a> .

# Fuser Failure.

## (U4 Fuser Fail/Power Off)

- Low temperature trouble/Power off (Fuser temperature drops below the set temperature after the Fuser warm-up is complete.)
- Warm-up fail/Power off (Fuser warm-up does not complete within 110 seconds.)
- STS Disconnection fail/Power off (Thermistor circuit is detected to be open).
- High Temperature trouble/Power off (Fuser temperature rises above the set temperature.)
- Continuous heat on/Power off (Heat rod is on for 10 seconds when the Main Drive Motor is stopped, after the Fuser warm-up is completed.)

### Fuser Failure Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	Switch the printer power OFF. Wait a few minutes, then switch the printer power-on. <b>Does the error message reappear?</b>	Go to <a href="#">Fuser Assembly</a> on page 3-18.	Go to step 2.
2	Run 25 to 30 test prints. <b>Does the error message reappear?</b>	Go to <a href="#">Fuser Assembly</a> on page 3-18.	Problem solved.

# Fan Failure; Power Off Now.

## (U5 Fan Fail/Power Off)

The printer is detecting incorrect fan rotation.

### Fan Failure Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	Switch the printer power OFF, then ON. <b>Does the Fan rotate when the main power is switched on?</b>	Go to step 4.	Go to step 2.
2	1. Switch the printer power OFF. 2. Remove the Left Interface Cover (RRP 1.1, <a href="#">page 6-6</a> ), Left Cover (RRP 1.2, <a href="#">page 6-7</a> ), and Left Plate (RRP 1.11, <a href="#">page 6-16</a> ). 3. Switch the printer power-on. 4. On the LVPS, check the voltage between P/J283 pin 1 and frame ground. <b>Is the voltage +19 ±1.9 VDC?</b>	Replace the Fan Assembly (RRP 9.1 on <a href="#">page 6-87</a> ).	Go to step 3.
3	Check the voltage between P/J281 pin 13 and frame ground. <b>Is the voltage +0.8 ±0.1VDC?</b>	Replace the LVPS (RRP 9.5 on <a href="#">page 6-91</a> ).	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).

## Fan Failure Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
4	<ol style="list-style-type: none"> <li>1. Enter Service Diagnostics and select Motors/Fans Tests.</li> <li>2. Scroll to Fan Motor High Speed and press <b>OK</b>.</li> </ol> <p><b>Does the Fan rotate at high speed?</b></p>	Go to step 7.	Go to step 5.
5	<ol style="list-style-type: none"> <li>1. Switch the printer power OFF.</li> <li>2. Remove the Left Interface Cover (RRP 1.1, <a href="#">page 6-6</a>), Left Cover (RRP 1.2, <a href="#">page 6-7</a>), and Left Plate (RRP 1.11, <a href="#">page 6-16</a>).</li> <li>3. Enter Service Diagnostics and select Motors/Fans Tests and press <b>OK</b>.</li> <li>4. Scroll to Fan Motor High Speed and press <b>OK</b>.</li> <li>5. On the LVPS, check the voltage between P/J283 pin 1 and frame ground.</li> </ol> <p><b>Is the voltage +21.5 ±2.1 VDC?</b></p>	Replace the Fan Assembly (RRP 9.1 on <a href="#">page 6-87</a> ).	Go to step 6.
6	<ol style="list-style-type: none"> <li>1. On the LVPS, check the voltage between P/J281 pin 11 and frame ground.</li> <li>2. With the Fan Motor High Speed test still highlighted, press <b>OK</b>.</li> </ol> <p><b>Does the voltage change from 0.8 VDC to 0.0 VDC when you press OK?</b></p>	Replace the LVPS (RRP 9.5 on <a href="#">page 6-91</a> ).	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).
7	<ol style="list-style-type: none"> <li>1. Switch the printer power OFF.</li> <li>2. Remove the Left Interface Cover (RRP 1.1, <a href="#">page 6-6</a>), Left Cover (RRP 1.2, <a href="#">page 6-7</a>), and Left Plate (RRP 1.11, <a href="#">page 6-16</a>).</li> <li>3. On the LVPS, check the voltage between P/J283 pin 2 and frame ground.</li> </ol> <p><b>Is the voltage less than 1.0 VDC?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Replace the Fan Assembly (RRP 9.1 on <a href="#">page 6-87</a> ).

## Engine Logic Board NVRAM Failure.

### (U6 NVM Fail/Power Off)

There is problem with Non-Volatile RAM on the Engine Logic Board.

### NVM Failure Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<p>Switch the printer power OFF then ON.</p> <p><b>Does the error message reappear?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 2.
2	<p>To ensure that the problem is solved, switch the printer power OFF and ON several times.</p> <p><b>Does the error message reappear?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Problem solved.

# Load MPT with [paper size] [paper type].

## (MPT Paper Empty)

### Load MPT Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Enter Service Diagnostics and select Sensor Tests.</li><li>2. Scroll to Sensor Input test and press <b>OK</b>.</li><li>3. Actuate and deactivate the MPT No Paper Sensor.</li></ol> <p><b>Does the Front Panel display alternate between “With Paper” and “Without Paper” as you press and release the actuator?</b></p>	It appears that the MPT No Paper Sensor is working correctly. If a problem persists, replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 2.
2	<p><b>Does the actuator move freely and is it in good condition (not broken or damaged)?</b></p>	Go to step 3.	Replace the MPT No Paper Sensor Actuator (RRP 4.5 on <a href="#">page 6-50</a> ).
3	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li><li>3. Switch the printer power-on.</li><li>4. On the Engine Logic Board, measure the voltage between P/J23 pin 14 and frame ground.</li></ol> <p><b>Is the voltage +3.3 VDC with the MPT No Paper Sensor deactivated and 0.0 VDC with the Sensor actuated?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 4.
4	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Remove the Left Front Cover (RRP 1.7 on <a href="#">page 6-12</a>).</li><li>3. Switch the printer power-on.</li><li>4. On the Connector PWB, measure the voltage between P/J45 pin 3 and frame ground.</li></ol> <p><b>Is the voltage +3.3 VDC with the MPT No Paper Sensor deactivated and 0.0 VDC with the Sensor actuated?</b></p>	Replace the Connector PWB (RRP 9.7 on <a href="#">page 6-94</a> ).	Go to step 5.
5	<p>Check the voltage between P/J45 pin 1 and frame ground.</p> <p><b>Is the voltage +1.2 ±0.1 VDC?</b></p>	Replace the MPT No Paper Sensor (RRP 4.8, <a href="#">page 6-53</a> ).	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).

# Tray 2 or 3 Failure.

## (E11: Tray 2/3 Fail)

Tray 2 or 3 disconnected after power-on.

Controller does not recognize the Feeder Assembly.

### Tray 2 or 3 Failure Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Check the alignment of the printer to the 550-Sheet Feeder and the alignment of the top 550-Sheet Feeder to the second 550-Sheet Feeder, if installed.</li><li>2. Ensure that the connectors are properly aligned and properly connected.</li></ol> <p><b>Are all connectors properly aligned and connected?</b></p>	Go to step 2.	Reseat the feeders and printer to obtain proper alignment and connection.
2	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li><li>3. Switch the printer power-on.</li><li>4. On the Engine Logic Board, check the voltage between P/J33 pin 13 and frame ground.</li></ol> <p><b>Is the voltage +24 VDC?</b></p>	Go to step 10.	Go to step 3.
3	<p>On the Engine Logic Board, check the voltage between P/J33 pin 6 and frame ground.</p> <p><b>Is the voltage +24 VDC?</b></p>	Go to step 4.	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).
4	<ol style="list-style-type: none"><li>1. Remove Paper Tray 2.</li><li>2. Check the voltage between the bottom terminal on the mating connector on the Tray 2 feeder and frame ground.</li></ol> <p><b>Is the voltage +24 VDC?</b></p>	Go to step 8.	Go to step 5.
5	<ol style="list-style-type: none"><li>1. Remove paper tray 1.</li><li>2. Check the voltage between the bottom terminal on the mating connector on the Tray 1 feeder and frame ground.</li></ol> <p><b>Is the voltage +24 VDC?</b></p>	Go to step 6.	Replace the Tray 1 Size PWB (RRP 3.13 on <a href="#">page 6-42</a> ). If the problem persists, replace the Tray 1 Feeder PWB (RRP 3.9 on <a href="#">page 6-36</a> ).
6	<p>Check the resistance between the bottom and top terminals of the mating connector on paper tray 1.</p> <p><b>Is there continuity between the two pins?</b></p>	Go to step 7.	Replace the paper tray mating connector (PL 2.2 on <a href="#">page 7-8</a> ).

## Tray 2 or 3 Failure Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
7	<p>Check that the paper tray mating connector and the feeder mating connector are properly aligned when tray 1 is inserted into the feeder.</p> <p><b>Are the mating connectors properly connected when the paper tray is inserted?</b></p>	<p>Replace the Tray 1 Size PWB (RRP 3.13 on <a href="#">page 6-42</a>). If the problem persists, replace the Tray 1 Feeder PWB (RRP 3.9 on <a href="#">page 6-37</a>).</p>	<p>Repair or replace components as necessary.</p>
8	<p>Check the resistance between the bottom and top terminals of the mating connector on the paper tray 2.</p> <p><b>Is there continuity between the two pins?</b></p>	<p>Go to step 9.</p>	<p>Replace the paper tray mating connector (PL 2.2 on <a href="#">page 7-8</a>).</p>
9	<p>Check that the paper tray mating connector and the feeder mating connector are properly aligned when the tray is inserted into the feeder.</p> <p><b>Are the mating connectors properly connected when the paper tray is inserted?</b></p>	<p>Replace the Tray 2 Size PWB (RRP 11.19 on <a href="#">page 6-139</a>). If the problem persists, replace the Tray 2 Feeder PWB (RRP 11.9 on <a href="#">page 6-128</a>).</p>	<p>Repair or replace components as necessary.</p>
10	<p><b>Does the printer have two optional 550-Sheet Feeders installed?</b></p>	<p>Go to step 11.</p>	<p>Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>).</p>
11	<p>On the Engine Logic Board, check the voltage between P/J33 pin 14 and frame ground.</p> <p><b>Is the voltage +24 VDC?</b></p>	<p>Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a>).</p>	<p>Go to step 12.</p>

## Tray 2 or 3 Failure Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
12	<p>1. Remove Paper Tray 3. 2. Check the voltage between the bottom terminal on the mating connector on the Tray 3 feeder and frame ground.</p> <p><b>Is the voltage +24 VDC?</b></p>	Go to step 13.	Replace the Tray 3 Size PWB (RRP 11.19 on <a href="#">page 6-139</a> ). If the problem persists, replace the Tray 3 Feeder PWB (RRP 11.9 on <a href="#">page 6-128</a> ).
13	<p>Check the resistance between the bottom and top terminals of the mating connector on paper tray 3.</p> <p><b>Is there continuity between the two pins?</b></p>	Go to step 14.	Replace the paper tray mating connector (PL 2.2 on <a href="#">page 7-8</a> ).
14	<p>Check that the paper tray mating connector and the feeder mating connector are properly aligned when the tray is inserted into the feeder.</p> <p><b>Are the mating connectors properly connected when the paper tray is inserted?</b></p>	Replace the Tray 3 Size PWB (RRP 11.19 on <a href="#">page 6-139</a> ). If the problem persists, replace the Tray 3 Feeder PWB (RRP 11.9 on <a href="#">page 6-128</a> ).	Repair or replace components as necessary.

## Stacker is Full, Unload Paper.

### (Stacker output tray full.)

Error message indicates the Stacker output tray is full.

### Stacker Full Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<p><b>Is there a paper stack in the offset bin actuating the Stack Full Sensor?</b></p>	Remove the paper stack.	Go to step 2.
2	<p><b>Is the paper curled?</b></p>	Go to step 4.	Go to step 3.

## Stacker Full Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
3	Lift and release the Stack Full Actuator a few times. <b>Does the actuator move freely?</b>	Go to step 5.	Replace Stack Full Actuator (RRP 10.12 on <a href="#">page 6-112</a> ) or Stack Full Sensor (RRP 10.13 on <a href="#">page 6-113</a> ), as necessary.
4	1. Replace paper in paper tray with fresh dry paper. 2. Run test prints. <b>Does the error code reappear?</b>	Go to step 5.	Problem solved.
5	1. Enter Service Diagnostics and select Sensor Tests. 2. Scroll to Stacker Full Sensor. 3. Manually actuate and deactivate the Stack Full Actuator. <b>Does the message on the display alternate between “Full” and “Not Full” as you lift and release the actuator (the count may have a short delay because of the sensor circuit)?</b>	Replace Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to <a href="#">Stacker Full Sensor</a> on page 3-37.

## Load Envelope Feeder with [paper size] [paper type].

### (Envelope Feeder empty.)

#### Load Envelope Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	1. Enter Service Diagnostics and select Sensor Tests. 2. Scroll to Envelope No Paper and press <b>OK</b> . 3. Press and release the Envelope Feeder No Paper Sensor Actuator. <b>Does the message on the display alternate between “With Paper” and “Without Paper” as you press and release the actuator?</b>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 2.
2	1. Switch the Printer power OFF. 2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a> ), Left Cover (RRP 1.2 on <a href="#">page 6-7</a> ), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a> ). 3. Switch the Printer power-on. 4. On the Engine Logic Board check the voltage between P/J23 Pin 4 and the frame ground. <b>Is the voltage 0.0 VDC?</b>	Go to step 3.	Go to <a href="#">Install or Reseat the Envelope Feeder</a> on page 2-37.

## Load Envelope Troubleshooting Procedure (cont'd.)

Step	Actions and Questions	Yes	No
3	<p>Check the voltage between P/J23 Pin 3 and frame ground.</p> <p><b>Is the voltage 3.3 VDC with the Envelope Feeder No Paper Sensor de-actuated, and 0.0 VDC with the sensor actuated?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 4.
4	<p>1. Switch the Printer power OFF and remove the Envelope Feeder.</p> <p>2. Check for continuity between J418 (Envelope Connector Assembly) and P/J23 Pin 3 on the Engine Logic Board.</p> <p><b>Is there continuity between the pins?</b></p>	Replace the Envelope Feeder PWB (RRP 13.3 on <a href="#">page 6-159</a> ). If the problem persists, replace the Envelope Feeder No Paper Sensor (RRP 13.10 on <a href="#">page 6-166</a> ).	Go to step 5.
5	<p>1. Remove the Front Cover (RRP 1.6 on <a href="#">page 6-11</a>) and the Left Front Cover (RRP 1.7 on <a href="#">page 6-12</a>).</p> <p>2. Check for continuity between P/J41 Pin 5 on the Connector PWB and P/J23 Pin 3 on the Engine Logic Board.</p> <p><b>Is there continuity between the pins?</b></p>	Replace the Envelope Connector Assembly (RRP 4.10 on <a href="#">page 6-56</a> ).	Check the Connector Harness Assembly for proper connection and for defective wires. Repair or replace if necessary. If Harness is in good condition, replace the Connector PWB (RRP 9.7 on <a href="#">page 6-94</a> ).

# Install or Reseat Print Cartridge.

## (J3: Missing EP Cartridge)

1. Print Cartridge is not installed or seated correctly.
2. The installed Print Cartridge is not the correct one.

### Print Cartridge Installation Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Open the Front Cover and remove the Print Cartridge.</li><li>2. Inspect the tab on the top center of the Print Cartridge that actuates the Print Cartridge Sensor Assembly.</li></ol> <p><b>Is the tab on the Print Cartridge intact?</b></p>	Go to step 2.	Replace the Print Cartridge (PL 8.1 on <a href="#">page 7-20</a> ).
2	<p>Press and release the Print Cartridge Sensor Assembly Actuator.</p> <p><b>Does the Print Cartridge Sensor Assembly Actuator move smoothly?</b></p>	Go to step 3.	Replace the Print Cartridge Sensor Assembly (RRP 7.3 on <a href="#">page 6-81</a> ).
3	<ol style="list-style-type: none"><li>1. Enter Service Diagnostics and select Sensor Tests.</li><li>2. Scroll to Print Cartridge Sensor test and press <b>OK</b>.</li><li>3. Insert and remove the Print Cartridge a few times.</li></ol> <p><b>Does the display alternate between “Not Installed” and “Installed” as you remove and replace the Print Cartridge?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 4.
4	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>), the Left Cover (RRP 1.2 on <a href="#">page 6-7</a>), and the Left Plate (RRP 1.11 on <a href="#">page 6-16</a>).</li><li>3. Install the Print Cartridge. Leave the Front Cover open.</li><li>4. Disconnect P/J25 from the Engine Logic Board.</li><li>5. On the Engine Logic Board, check for continuity between J21-4 and J25-3, and J25-2 and J25-1 as you insert and remove the Print Cartridge.</li></ol> <p><b>Is there continuity between J25-4 and J25-3, and J25-2 and J25-1 when you insert the cartridge and no continuity when you remove the cartridge?</b></p>	Replace the Engine Logic Board (RRP 9.3 on <a href="#">page 6-89</a> ).	Go to step 5.
5	<p><b>Is the Print Cartridge a Xerox Phaser 4400 Print Cartridge?</b></p>	Replace the Print Cartridge Sensor Assembly together with the harness (RRP 7.4 on <a href="#">page 6-81</a> ).	Replace Print Cartridge with a Xerox Phaser 4400 Print Cartridge (PL 8.1 on <a href="#">page 7-20</a> ).

# Image Processor POST Error Codes

The Image Processor Power-On Self-Test (POST) detects two major types of faults:

- Hard faults are those that are known to prevent initialization of the operating system used by the Image Processor board CPU.
- Soft faults are those that are not a core resource to the operating system, and do not prevent it from initializing and becoming available as a tool for troubleshooting. Soft faults are reported on the Startup Page after the system is running.

## Fault Reporting Devices

There are four fault presentation devices: the health LED, the Front Panel LED, the Front Panel display, and the Start Page. (Refer to [Image Processor Board](#) on page 1-10 for the health LED location on the Image Processor Board.) These devices are used only after initial tests indicate they are functioning properly.

For hard faults:

- The health LED blinks according to the fault code.
- The Front Panel LED blinks in unison with the health LED.
- The last posted message to the Front Panel display is present.

For soft faults:

- All soft faults are printed on the Start Page.

## LED Blink Patterns

For faults identified as hard faults, the POST firmware blinks the Health LED in a particular pattern of short and long blinks to identify the fault. A long blink is worth 5 and a short blink is worth 1. If a fault blink pattern is flashed as long, long, short, short, this is fault code  $5+5+1+1=12$ . Note that for test 5, the blink pattern is five short blinks.

The exception to the pattern just described is a RAM test error. The RAM tests have a special blink pattern and the front panel displays **RAM Error**. During power-on the front panel LED is on. If the RAM tests fail, the Image Processor Board health LED turns off, and the front panel LED is red. At 1/2-second intervals, the health LED and the front panel LED toggle continuously.

## POST Error Code Table

LED Blink Code	Front Panel Message	Comment
1+1	2: I/O ASIC	Image Processor Board ASIC failure. Go to <a href="#">Image Processor Isolation</a> on page 3-31.
1+1+1	3: LOCAL BUS BRIDGE/FRONT PANEL	Image Processor Board ASIC failure. Go to <a href="#">Image Processor Isolation</a> on page 3-31.
1+1+1+1+1	5: Please Install Configuration Chip.	<ol style="list-style-type: none"> <li>1. Switch off printer power.</li> <li>2. Remove and re-install the Configuration Chip.</li> <li>3. Switch on printer power.</li> <li>4. If the error message persists, first replace the Configuration Chip, then the Image Processor Board.</li> </ol>
5+5	10: EEPROM	<ol style="list-style-type: none"> <li>1. Switch off printer power.</li> <li>2. Remove and re-install the NVRAM EEPROM.</li> <li>3. Switch on printer power.</li> <li>4. If the error message persists, first replace the NVRAM EEPROM, then the Image Processor Board (RRP 9.2 on <a href="#">page 6-88</a>).</li> </ol>
5+5+1	11: ETHERNET PHY	Image Processor parallel port failure, USB port failure, E-Net Port Failure. Replace Image Processor Board (RRP 9.2 on <a href="#">page 6-88</a> ).
5+5+1+1	12: CPU INTERRUPTS	Go to <a href="#">Image Processor Isolation</a> on page 3-31.
5+5+1+1+1	13: USB	Image Processor parallel port failure, USB port failure, E-Net Port Failure. Replace Image Processor Board (RRP 9.2 on <a href="#">page 6-88</a> ).
5+5+1+1+1+1	14: REAL TIME CLOCK	Image Processor Board Timer failure. Go to <a href="#">Image Processor Isolation</a> on page 3-31.
5+5+5	15: RAM DIMM	RAM DIMM failure. Go to <a href="#">15: RAM DIMM (RAM Error)</a> on page 2-60.
5+5+5+1	16: RAM LIMIT	Image Processor Board Timer failure. Go to <a href="#">Image Processor Isolation</a> on page 3-31.
5+5+5+1+1+1	18: L2 CACHE TEST	Image Processor Board Timer failure. Go to <a href="#">Image Processor Isolation</a> on page 3-31.
5+5+5+1+1+1+1	19: PCI BRIDGE	Image Processor Board Timer failure. Go to <a href="#">Image Processor Isolation</a> on page 3-31.
5+5+5+5	20: IDE DISK	Hard disk failure. Replace the Hard Disk (PL 10.1 on <a href="#">page 7-24</a> ). Replace the Image Processor Board (RRP 9.2 on <a href="#">page 6-88</a> ).
5+5+5+5+1	21: PARALLEL PORT	Image Processor parallel port failure, USB port failure, E-Net Port Failure. Image Processor Board Timer failure. Go to <a href="#">Image Processor Isolation</a> on page 3-31.
5+5+5+5+1+1	22: ENGINE COMMAND	Image Processor Board Timer failure. Go to <a href="#">Image Processor Isolation</a> on page 3-31.
5+5+5+5+1+1+1	23: VIDEO DMA TEST	Image Processor Xerox Image Enhanced VDMA failure. Image Processor Board Timer failure. Go to <a href="#">Image Processor Isolation</a> on page 3-31.
Continuous 1/2 second interval	RAM Error	Go to <a href="#">15: RAM DIMM (RAM Error)</a> on page 2-60.

## Start page Soft Fault Messages

The soft faults that are set by POST diagnostics will print a message on the Start Page in a gray box. The box is large enough to contain all the soft faults encountered, with the upper left corner of the box in the center of the Start Page, and extending to the right margin, similar to the one shown here.

Hardware Failure:  
<device>:  
General Failure

The following messages are substituted for <device>:

- Real Time Clock: (for POST\_DEV\_RTC)
- Ram Memory Slot 1 Checksum (for POST\_DEV\_DIMM)
- Ram Memory Slot 2 Checksum (for POST\_DEV\_DIMM)
- Ram Memory Slot 1 Rejected (for POST\_DEV\_DIMM)
- Ram Memory Slot 2 Rejected (for POST\_DEV\_DIMM)
- IDE Disk: (for POST\_DEV\_IDEOPT)
- Parallel Port: (for POST\_DEV\_CENT)

## 15: RAM DIMM (RAM Error)

### RAM DIMM Troubleshooting Procedure

Step	Actions and Questions	Yes	No
1	<ol style="list-style-type: none"><li>1. Switch the printer power OFF.</li><li>2. Remove the Left Interface Cover (RRP 1.1 on <a href="#">page 6-6</a>).</li><li>3. Remove and re-install the RAM DIMM(s).</li><li>4. Switch the printer power-on.</li></ol> <p><b>Does the error code reappear?</b></p>	Go to step 2.	Problem solved.
2	<p><b>Does the RAM DIMM meet the specifications listed on <a href="#">page 1-3</a>?</b></p>	Go to step 3.	Install a new RAM DIMM ( <a href="#">PL 10.1 Electrical</a> on <a href="#">page 7-24</a> ).
3	<p><b>Does the RAM function correctly?</b></p>	Problem solved.	Install a new RAM DIMM ( <a href="#">PL 10.1 Electrical</a> on <a href="#">page 7-24</a> ).